

## DMX Values

### 5 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0-100%
2	Strobe	000 ⇄ 010	No function
		011 ⇄ 255	Strobe, slow to fast
3	Auto programs	000 ⇄ 010	No function
		011 ⇄ 070	Auto program 1
		071 ⇄ 130	Auto program 2
		131 ⇄ 190	Auto program 3
		191 ⇄ 255	Auto program 4
4	Auto speed	000 ⇄ 255	0-100%
5	Dimmer speed	000 ⇄ 051	Preset dimmer speed from display menu
		052 ⇄ 101	Dimmer speed mode off
		102 ⇄ 152	Dimmer speed mode 1 (fastest)
		153 ⇄ 203	Dimmer speed mode 2
		204 ⇄ 255	Dimmer speed mode 3 (slowest)

### 2 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0-100%
2	Strobe	000 ⇄ 010	No function
		011 ⇄ 255	Strobe, slow to fast

### 1 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0-100%