

**DMX Values**

**6 Ch**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0-100%
2	Dimmer fine	000 ⇄ 255	0-100%
3	Strobe	000 ⇄ 010 011 ⇄ 255	No function Strobe, slow to fast
4	Auto programs	000 ⇄ 015 016 ⇄ 095 096 ⇄ 175 176 ⇄ 255	No function Auto program 1 Auto program 2 Auto program 3
5	Auto speed	000 ⇄ 255	0-100%
6	Control (hold for 3 seconds, then release)	000 ⇄ 007 008 ⇄ 015 016 ⇄ 023 024 ⇄ 031 032 ⇄ 039 040 ⇄ 047 048 ⇄ 055 056 ⇄ 063 064 ⇄ 071 072 ⇄ 079 080 ⇄ 087 088 ⇄ 095 096 ⇄ 103 104 ⇄ 111 112 ⇄ 255	No function Dimmer reset Dimmer: S-Curve Dimmer: linear Dimmer: square Dimmer: inverted square Dimmer speed mode off Dimmer speed mode 1 Dimmer speed mode 2 Dimmer speed mode 3 Fan auto Fan on Fan off Fan silent No function (reserved)

**3Ch**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0-100%
2	Dimmer fine	000 ⇄ 255	0-100%
3	Strobe	000 ⇄ 010 011 ⇄ 255	No function Strobe, slow to fast

**2Ch**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0-100%
2	Dimmer fine	000 ⇄ 255	0-100%

**1Ch**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0-100%