

EN

**DMX Values**

**16 Ch**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Red Fine	000 ⇔ 255	0–100%
5	Green	000 ⇔ 255	0–100%
6	Green Fine	000 ⇔ 255	0–100%
7	Blue	000 ⇔ 255	0–100%
8	Blue Fine	000 ⇔ 255	0–100%
9	Amber	000 ⇔ 255	0–100%
10	Amber Fine	000 ⇔ 255	0–100%
11	Lime	000 ⇔ 255	0–100%
12	Lime Fine	000 ⇔ 255	0–100%
13	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
14	Virtual Color Wheel	000 ⇔ 255	Refer to the <a href="#">Color Chart</a> section for specific values
15	Color Temperature	000 ⇔ 255	Refer to the <a href="#">Color Temperature Chart</a> section for specific values
16	Control (hold for 3 seconds)	000 ⇔ 007	No function
		008 ⇔ 015	Dimmer Reset
		016 ⇔ 023	Red Shift On
		024 ⇔ 031	Red Shift Off
		032 ⇔ 039	Dimmer: S-Curve
		040 ⇔ 047	Dimmer: Linear
		048 ⇔ 055	Dimmer: Square
		056 ⇔ 063	Dimmer: Inverse Square
		064 ⇔ 071	Dimmer Mode: Off
		072 ⇔ 079	Dimmer Mode 1
		080 ⇔ 087	Dimmer Mode 2
	088 ⇔ 095	Dimmer Mode 3	
	096 ⇔ 255	No function	

**13 Ch**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Red Fine	000 ⇔ 255	0–100%
5	Green	000 ⇔ 255	0–100%
6	Green Fine	000 ⇔ 255	0–100%
7	Blue	000 ⇔ 255	0–100%
8	Blue Fine	000 ⇔ 255	0–100%
9	Amber	000 ⇔ 255	0–100%
10	Amber Fine	000 ⇔ 255	0–100%
11	Lime	000 ⇔ 255	0–100%
12	Lime Fine	000 ⇔ 255	0–100%
13	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast

12 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Red	000 ⇔ 255	0–100%
3	Green	000 ⇔ 255	0–100%
4	Blue	000 ⇔ 255	0–100%
5	Amber	000 ⇔ 255	0–100%
6	Lime	000 ⇔ 255	0–100%
7	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
8	Virtual Color Wheel	000 ⇔ 255	Refer to the <a href="#">Color Chart</a> section for specific values
9	Color Temperature	000 ⇔ 255	Refer to the <a href="#">Color Temperature Chart</a> section for specific values
10	Auto Programs	000 ⇔ 010	No function
		011 ⇔ 060	Auto program 1
		061 ⇔ 110	Auto program 2
		111 ⇔ 160	Auto program 3
		161 ⇔ 210	Auto program 4
211 ⇔ 255	Auto program 5		
11	Auto Speed	000 ⇔ 255	Auto speed, slow to fast
12	Control (hold for 3 seconds)	000 ⇔ 007	No function
		008 ⇔ 015	Dimmer Reset
		016 ⇔ 023	Red Shift On
		024 ⇔ 031	Red Shift Off
		032 ⇔ 039	Dimmer: S-Curve
		040 ⇔ 047	Dimmer: Linear
		048 ⇔ 055	Dimmer: Square
		056 ⇔ 063	Dimmer: Inverse Square
		064 ⇔ 071	Dimmer Mode: Off
		072 ⇔ 079	Dimmer Mode 1
		080 ⇔ 087	Dimmer Mode 2
		088 ⇔ 095	Dimmer Mode 3
096 ⇔ 255	No function		

10 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Amber	000 ⇔ 255	0–100%
7	Lime	000 ⇔ 255	0–100%
8	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
9	Virtual Color Wheel	000 ⇔ 255	Refer to the <a href="#">Color Chart</a> section for specific values
10	Color Temperature	000 ⇔ 255	Refer to the <a href="#">Color Temperature Chart</a> section for specific values

EN

7Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Red	000 ⇔ 255	0–100%
3	Green	000 ⇔ 255	0–100%
4	Blue	000 ⇔ 255	0–100%
5	Amber	000 ⇔ 255	0–100%
6	Lime	000 ⇔ 255	0–100%
7	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast

5Ch

Channel	Function	Value	Percent/Setting
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%
4	Amber	000 ⇔ 255	0–100%
5	Lime	000 ⇔ 255	0–100%

3Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Virtual Color Wheel	000 ⇔ 255	Refer to the <a href="#">Color Chart</a> section for specific values
3	Color Temperature	000 ⇔ 255	Refer to the <a href="#">Color Temperature Chart</a> section for specific values

HSV

Channel	Function	Value	Percent/Setting
1	Hue	000 ⇔ 255	0–100%
2	Saturation	000 ⇔ 255	0–100%
3	Value	000 ⇔ 255	0–100%

1Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%