

**DMX Values**

**10Ch**

Channel	Function	Value	Percent/Setting
1	Dimmer	000○ 255	0–100%
2	Red	000○ 255	0–100%
3	Green	000○ 255	0–100%
4	Blue	000○ 255	0–100%
5	Amber	000○ 255	0–100%
6	Strobe	000○ 010 011○ 255	No function Slow to fast
7	Color Macro + White Balance	000○ 010 011○ 030 031○ 050 051○ 070 071○ 090 091○ 110 111○ 130 131○ 150 151○ 170 171○ 200 201○ 205 206○ 210 211○ 215 216○ 220 221○ 225 226○ 230 231○ 235 236○ 240 241○ 245 246○ 250 251○ 255	No function R: 100% G: 0–100% B: 0 R: 100%–0 G: 100% B: 0 R: 0 G: 100% B: 0–100% R: 0 G: 100%–0 B: 100% R: 0–100% G: 0 B: 100% R: 100% G: 0 B: 100%–0 R: 100% G: 0–100% B: 0–100% R: 100%–0 G: 100%–0 B: 100% R: 100% G: 100% B: 100% A: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11
8	Auto Programs	000○ 051 052○ 101 102○ 152 153○ 203 204○ 254 255	No function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 0 (Auto 1–4)
9	Auto Speed	000○ 255	Slow to fast (when channel 8 is <b>052–255</b> )
10	Dimmer Speed	000○ 051 052○ 101 102○ 152 153○ 203 204○ 255	Preset dimmer speed from display menu Dimming curve off (linear dimmer) Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 (slowest)

**DMX Values (Cont.)**

<b>6 Ch</b>	<b>Channel</b>	<b>Function</b>	<b>Value</b>	<b>Percent/Setting</b>
	1	Dimmer	000↻255	0–100%
	2	Red	000↻255	0–100%
	3	Green	000↻255	0–100%
	4	Blue	000↻255	0–100%
	5	Amber	000↻255	0–100%
	6	Strobe	000↻010 011↻255	No function Slow to fast

<b>4 Ch</b>	<b>Channel</b>	<b>Function</b>	<b>Value</b>	<b>Percent/Setting</b>
	1	Red	000↻255	0–100%
	2	Green	000↻255	0–100%
	3	Blue	000↻255	0–100%
	4	Amber	000↻255	0–100%