

DMX Values

4Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ∘ 255	0–100%
	2	Dimmer Fine	000 ∘ 255	Fine control (16-bit)
	3	Strobe Speed	000 ∘ 005	No function
			006 ∘ 255	Strobe (slow to fast)
	4	Strobe	000 ∘ 005	No function
			006 ∘ 042	Ramp up
			043 ∘ 085	Ramp down
			086 ∘ 128	Ramp up/ramp down
			129 ∘ 171	Random strobe
			172 ∘ 214	Lighting effect
			215 ∘ 255	Spike effect
2Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ∘ 255	0–100%
	2	Dimmer Fine	000 ∘ 255	Fine control (16-bit)
1Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ∘ 255	0–100%