


# Q-Wash 575™

## Snapshot

Ok on Dimmer	⊘
Outdoor OK	⊘
Sound Activated	✓
DMX512	✓
Master/Slave	✓
Multitap Transformer	✓
Replaceable Fuse	✓
User Serviceable	⊘
Duty Cycle	⊘

## USER MANUAL

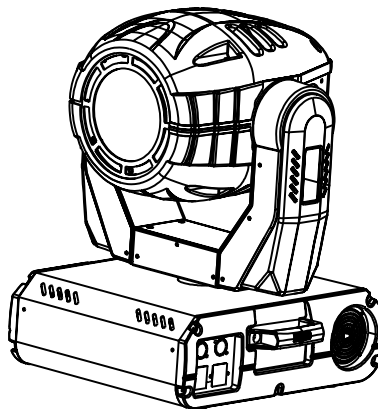

Chauvet, 3000 N 29<sup>th</sup> Ct, Hollywood, FL 33020 U.S.A.  
(800) 762-1084 – (954) 929-1115  
FAX (954) 929-5560  
[www.chauvetlighting.com](http://www.chauvetlighting.com)

# TABLE OF CONTENTS

<b>1. BEFORE YOU BEGIN</b> .....	<b>3</b>
WHAT IS INCLUDED .....	3
UNPACKING INSTRUCTIONS.....	3
AC POWER .....	3
CONTACT US .....	4
SAFETY INSTRUCTIONS.....	4
<b>2. INTRODUCTION</b> .....	<b>5</b>
FEATURES .....	5
DMX CHANNEL SUMMARY .....	5
PRODUCT OVERVIEW .....	6
<b>3. SETUP</b> .....	<b>7</b>
LAMP .....	7
Lamp Installation.....	7
Fuse Replacement.....	8
FIXTURE LINKING.....	8
Data Cabling .....	8
DMX Data Cable.....	8
Cable Connectors.....	9
3-Pin to 5-Pin Conversion Chart.....	9
SETTING UP A DMX SERIAL DATA LINK .....	9
MASTER/SLAVE FIXTURE LINKING .....	10
MOUNTING .....	10
Orientation .....	10
Rigging.....	10
<b>4. OPERATING INSTRUCTIONS</b> .....	<b>11</b>
NAVIGATING THE CONTROL PANEL.....	11
MENU MAP.....	12
CONTROL PANEL FUNCTIONS .....	13
Program Options.....	13
User Configurations .....	14
To set the pan to inverting or non-inverting: .....	14
To set the tilt to inverting or non-inverting: .....	14
Service Functions .....	14
To reset the fixture:.....	14
To turn the Lamp Power on or off: .....	14
OPERATION.....	14
Stand-Alone Mode (Sound-Active, Auto Mode): .....	14
Master/Slave Mode (Master Sound, Master Auto):.....	15
DMX Mode .....	15
DMX CHANNEL VALUES .....	15
GENERAL TROUBLESHOOTING .....	17
TECHNICAL SUPPORT .....	18
<b>5. APPENDIX</b> .....	<b>18</b>
DMX PRIMER .....	18
GENERAL MAINTENANCE .....	18
RETURNS PROCEDURE .....	19
CLAIMS .....	19
TECHNICAL SPECIFICATIONS.....	19

# 1. BEFORE YOU BEGIN

## What is included

- 1 x Q-Wash 575™
- HMI 575W Lamp
- Power Cord
- Warranty Card
- User Manual


## Unpacking Instructions

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

## AC Power

To determine the power requirements for a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart. A fixture's listed current rating is its average current draw under normal conditions. All fixtures must be powered directly off a switched circuit and cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch. Before applying power to a fixture, check that the source voltage matches the fixture's requirement. Check the fixture or device carefully to make sure that if a voltage selection switch exists that it is set to the correct line voltage you will use.

Figure 1 - AC Voltage Switch

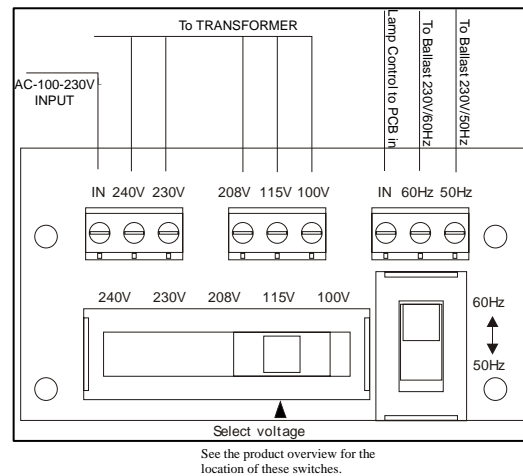

### Warning!

**Verify that the voltage select switch on your unit matches the line voltage applied, and that the frequency select switch on your unit matches the frequency of the power in your region. Also verify that you are using the correct fuse value for your operating voltage. All fixtures must be connected to circuits with a suitable Earth Ground. Damage to your fixture may occur if these instructions are not followed.**

POWER CABLE	PIN	INTERNATIONAL
BROWN	Live	L
BLUE	Neutral	N
YELLOW/GREEN	Earth	EG (Ground)

OPERATING VOLTAGE	MUST USE CORRECT FUSE
120V	15A
230V	10A

## Contact Us

### World Wide

**General Information** Chauvet Lighting  
3000 North 29<sup>th</sup> Court  
Hollywood, FL 33020  
voice: 954.929.1115  
fax: 954.929.5560  
toll free: 800.762.1084

**Technical Support** Chauvet Lighting  
3000 North 29<sup>th</sup> Court  
Hollywood, FL 33020  
voice: 954.929.1115 (**Press 4**)  
fax: 954.929.5560 (**Attention: Service**)

**World Wide Web** [www.chauvetlighting.com](http://www.chauvetlighting.com)

## Safety Instructions



Please read these instructions carefully, which includes important information about the installation, usage and maintenance of this product.

- Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- Always make sure that you are connecting to the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only!
- To prevent risk of fire or shock, do not expose fixture to rain or moisture. Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 20in (50cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Always disconnect from power source before servicing or replacing lamp or fuse and be sure to replace with same lamp source.
- Secure fixture to fastening device using a safety chain. Never carry the fixture solely by its head. Use its carrying handles.
- Maximum ambient temperature (Ta) is 95°F (35°C). Do not operate fixture at temperatures higher than this.
- In the event of a serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- Don't connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to the lamp while it is on.

### **Caution!**

***There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact CHAUVET at: 954-929-1115.***

# 2. INTRODUCTION

## Features

- 16-channel DMX-512 moving yoke color wash
- Pan: 530° / tilt: 280°
- Variable strobe/shutter
- CMY color mix system (cyan, magenta, yellow wheels)
- Color wheel
  - 6 colors + white
  - Red, blue, green, purple, 3200° & 5000°K correction filters
  - Rainbow color spin in both directions at variable speeds
- 31 color macros
- Beam shaper effect
- Frost filter
- Variable motorized zoom (26° - 34°)
- Variable motorized dimmer (0 – 100%)
- Remote fixture reset, lamp on/off and vector speed channel
- Vector speed channel for CMY color mix system



### Additional Features

- Automatic pan & tilt correction
- Micro-stepping motors
- LED display
- 16bit pan/tilt resolution
- Thermal switch
- Fan cooled

## DMX Channel Summary

CHANNEL	FUNCTION
1	Pan
2	Tilt
3	Pan Fine (16-bit mode)
4	Tilt Fine (16-bit mode)
5	Vector Speed
6	Lamp and Reset
7	Color Wheel
8	Cyan
9	Magenta
10	Yellow
11	CMY Speed
12	Color Macro
13	Effect Wheel
14	Zoom
15	Strobe
16	Dimmer

## Product Overview

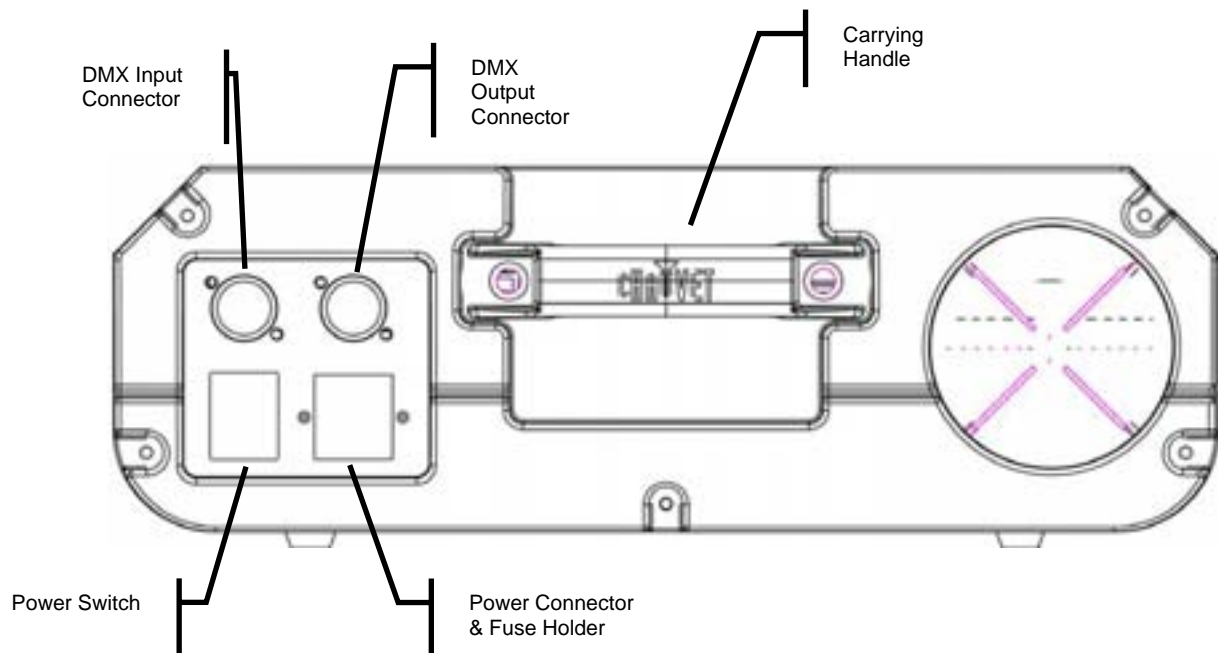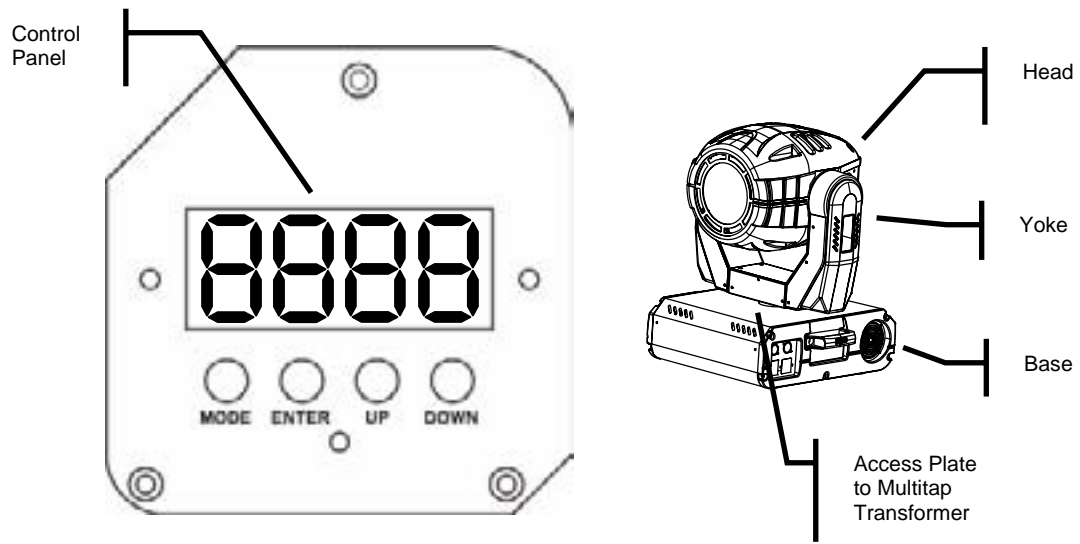

# 3. SETUP

## Lamp

You will need to install a lamp prior to the initial operation of the fixture. A 575W HMI lamp is included.

**Warning!** *When replacing the lamp, please wait 15 minutes after powering down to allow the unit to cool down! Always disconnect from main power prior to lamp replacement.*

Do not touch the envelope (glass area) of the bulb with bare hands. If this happens, clean the lamp with alcohol and wipe it with a lint free cloth before installation.

## Lamp Installation

- 1) Remove the four cover screws as indicated in figure A. Note that this is the side of the cover with the fan showing.
- 2) Remove the two thumbscrews indicated in figure B.
- 3) Lift the fan towards the back of the head as indicated in figure B.
- 4) Pull the reflector housing towards the back of the head as indicated in figure C.
- 5) Remove the two lamp screws indicated in figure D.
- 6) Remove the lamp.

**Warning:** Nipple on lamp must be facing directly up or directly down with respect to the head. In other words, the nipple should NOT be pointing towards the back of the reflector, or towards the front of the head. Damage to the reflector can occur if these instructions are not followed!

- 7) Hold the new lamp with a lint-free cloth and insert into lamp socket, making sure that the nipple on the lamp is pointing up or down, and not towards the reflector or front.
- 8) Tighten lamp screws.
- 9) Gently push reflector towards the front of the head.
- 10) Lower fan towards lamp and tighten the two thumbscrews.
- 11) Replace top cover.

Figure A



Figure B

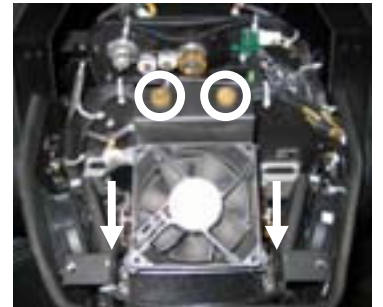


Figure C


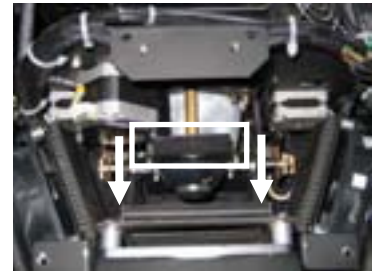


Figure D






Disconnect the power cord before replacing a fuse and always replace with the same type fuse.

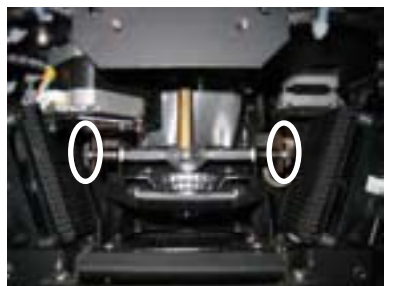

## Fuse Replacement

With a flat head screwdriver wedge the fuse holder out of its housing. Remove the damaged fuse from its holder and replace with exact same type fuse. Insert the fuse holder back in its place and reconnect power.

The fuse is located inside this compartment. Remove using a flat head screwdriver.

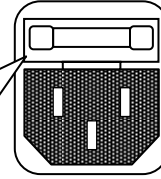

## Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

**Important:** Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard no more than 32 devices should be connected on one data link. Connecting more than 32 fixtures on one serial data link without the use of a DMX optically-isolated splitter may result in deterioration of the digital DMX signal.

Maximum recommended serial data link distance: 500 meters (1640 ft.)

Maximum recommended number of fixtures on a serial data link: 32 fixtures

## Data Cabling

To link fixtures together you must obtain data cables. You can purchase CHAUVET-certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

## DMX DATA CABLE


Use a Belden© 9841 or equivalent cable which meets the specifications for EIA RS-485 applications. Standard microphone cables cannot transmit DMX data reliably over long distances. The cable will have the following characteristics:

*2-conductor twisted pair plus a shield*  
*Maximum capacitance between conductors – 30 pF/ft.*  
*Maximum capacitance between conductor and shield – 55 pF/ft.*  
*Maximum resistance of 20 ohms / 1000 ft.*  
*Nominal impedance 100 – 140 ohms*



## CABLE CONNECTORS

Cabling must have a male XLR connector on one end and a female XLR connector on the other end.

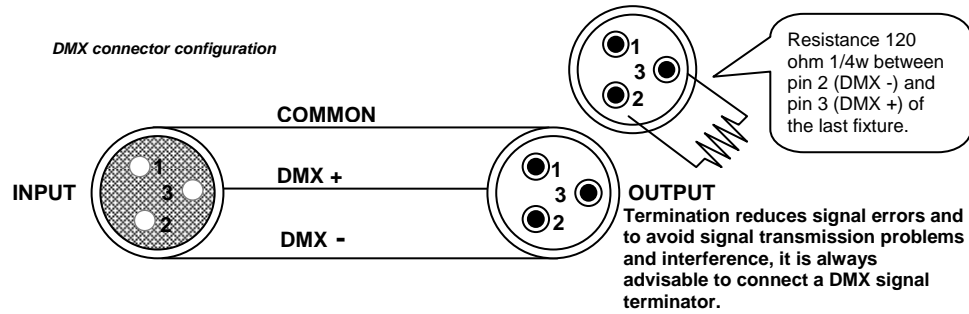

**CAUTION** Do not allow contact between the common and the fixture's chassis ground. Grounding the common can cause a ground loop, and your fixture may perform erratically. Test cables with an ohm meter to verify correct polarity and to make sure the pins are not grounded or shorted to the shield or each other.

## 3-PIN TO 5-PIN CONVERSION CHART

**Note!** If you use a controller with a 5 pin DMX output connector, you will need to use a 5 pin to 3 pin adapter. CHAUVET Model No: DMX5M, or DMX5F. The chart below details a proper cable conversion:

### 3 PIN TO 5 PIN CONVERSION CHART

Conductor	3 Pin Female (output)	5 Pin Male (Input)
Ground/Shield	Pin 1	Pin 1
Data ( - ) signal	Pin 2	Pin 2
Data ( + ) signal	Pin 3	Pin 3
Do not use		Do not use
Do not use		Do not use



## Setting up a DMX Serial Data Link

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the controller.
2. Connect the end of the cable coming from the controller which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector.
3. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.


### CHAUVET Certified DMX Data Cables

Order Code	Description
DMX1.5	DMX Cable 1.5m/4.9ft
DMX4.5	DMX Cable 4.5m/14.8ft
DMX10	DMX Cable 10m/32.8ft

### Universal DMX Controller

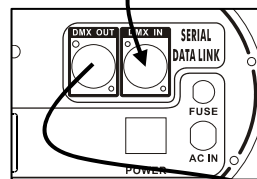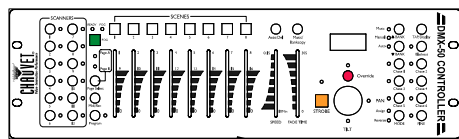


This drawing provides a general illustration of the DMX Input/Output panel of a lighting fixture.

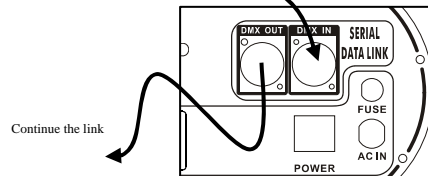

## Master/Slave Fixture Linking

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the first fixture.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

Often, the setup for Master-Slave and Standalone operation requires that the first fixture in the chain be initialized for this purpose via either settings in the control panel or DIP-switches. Secondly, the fixtures that follow may also require a slave setting. Please consult the "Operating Instructions" section in this manual for complete instructions for this type of setup and configuration.

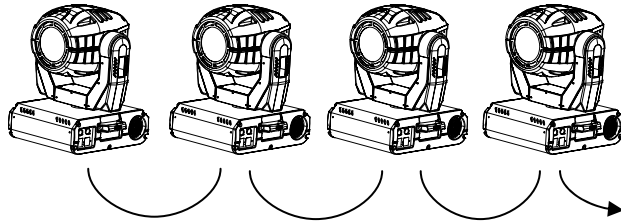

## Mounting

### ORIENTATION


This fixture may be mounted in any position provided there is adequate room for ventilation.

### RIGGING

It is important never to obstruct the fan or vents pathway. Mount the fixture using a suitable "C" or "O" type clamp. Adjust the angle of the fixture by loosening both knobs and tilting the fixture. After finding the desired position, retighten both knobs.

- When selecting installation location, take into consideration lamp replacement access and routine maintenance.
- Safety cables must always be used.
- Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperature changes or restricted ventilation.
- A minimum of two mounting points must be used for this fixture.

*Hanging Clamp*

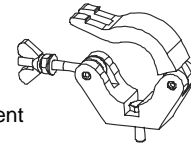

Note!  
Clamp is sold separately.

# 4. OPERATING INSTRUCTIONS

## Navigating the Control Panel

Access control panel functions using the four panel buttons located directly underneath the LCD Display.


Button	Function
<MODE>	Used to access the menu or to return to a previous menu option
<ENTER>	Used to select and store the current menu or option within a menu
<UP>	Scrolls through menu options in ascending order
<DOWN>	Scrolls through menu options in descending order



The Control Panel LED Display shows the menu items you select from the menu map on page 12. When a menu function is selected, the display will show immediately the first available option for the selected menu function. To select a menu item, press <ENTER>.

Press the <MODE> button once to activate the control panel. Pressing the <MODE> button again will scroll through the different top-level menu options available. Use the <UP> and <DOWN> buttons to navigate the menu options. Press the <ENTER> button to access the menu function currently displayed or to enable a menu option. To return to the previous option or menu without changing the value, press the <MODE> button.

## Menu Map

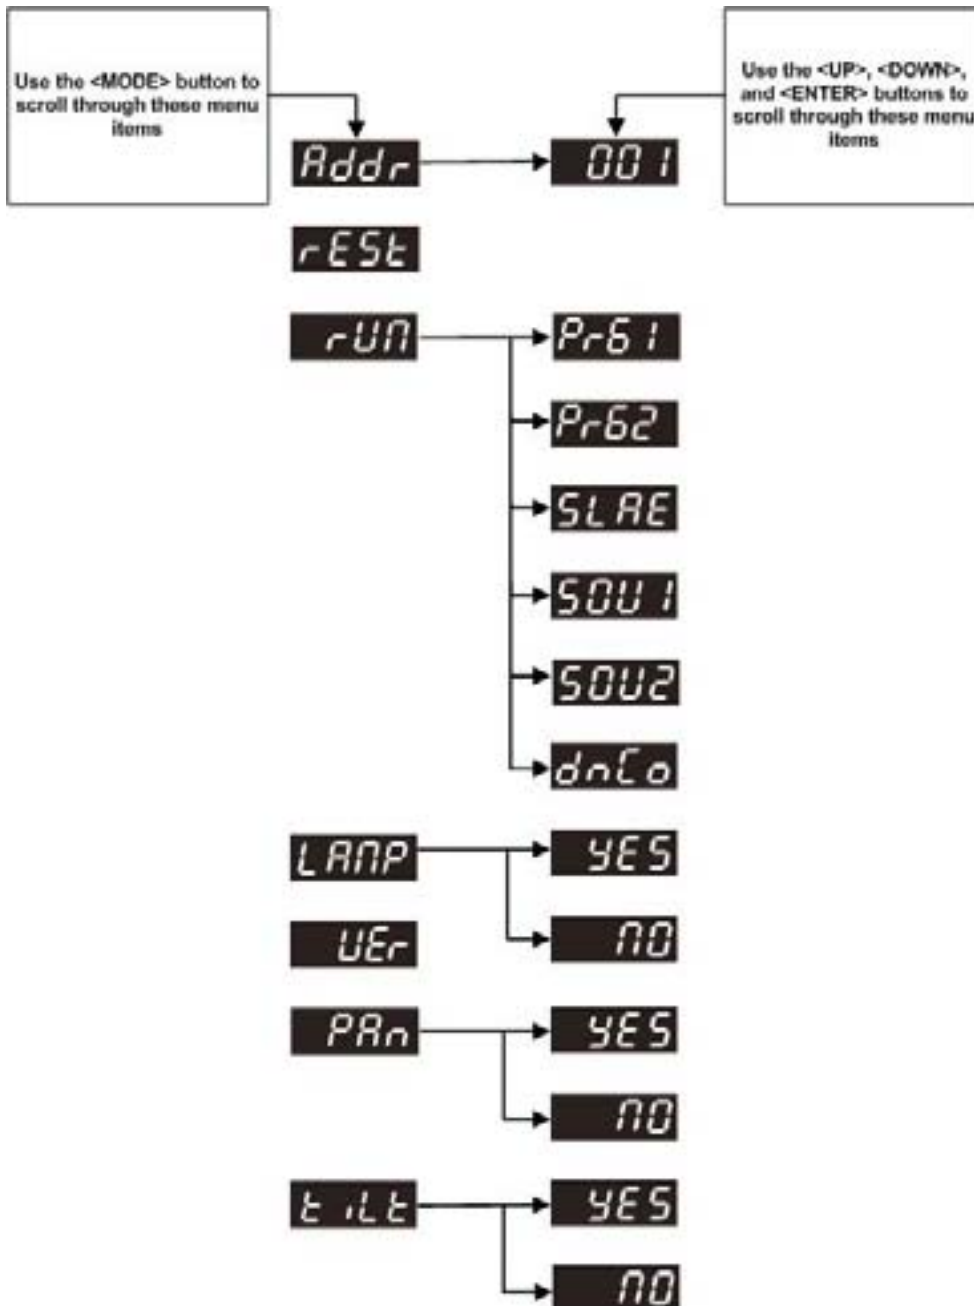

### When navigating the menu:

Use the "UP" button to move up.  
Use the "DOWN" button to move down.  
Use the "ENTER" button to move right.  
Use the "MODE" button to move left, or to scroll through the left-most items in the menu map.

## Control Panel Functions

FUNCTION	OPTIONS	NOTES
<b>PAn</b>	NO/YES	Pan Invert (Yes or No)
<b>tLt</b>	NO/YES	Tilt Invert (Yes or No)
<b>Addr</b>	001-497	DMX Channel Address
<b>rEst</b>	YES	Fixture reset
<b>rUN</b>	dn.Co. Pr6.1 Pr6.2 SLAE Sou.1 Sou.2	DMX-512 Mode Automatic Program 1 (when mounted upside down) Automatic Program 2 (when floor positioned) Slave Mode Music Program 1 (when mounted upside down) Music Program 2 (when floor positioned)
<b>LAMP</b>	ON OFF	Lamp on Lamp off
<b>VER</b>	X.X	Software version
<b>HEAT</b>	Status	Too hot to strike, or no lamp
<b>LAER</b>	Status	Lamp error

## Program Options

MENU OPTION	DESCRIPTION
<b>Pr61</b>	<b>Automatic - Master Unit (Ceiling-mounted):</b> Sets the fixture to Master status for Master-Slave operation and the built in programs will be triggered automatically. No data link is required; all fixtures can be set to this mode for Stand-alone operation.
<b>Pr62</b>	<b>Automatic - Master Unit (Floor-mounted):</b> Sets the fixture to Master status for Master-Slave operation and the built in programs will be triggered automatically. No data link is required; all fixtures can be set to this mode for Stand-alone operation.
<b>SLAE</b>	<b>Slave Unit:</b> Sets the fixture to run in sync with the Master. You must set the first fixture in the data link to "Master" otherwise nothing will happen.
<b>SOU1</b>	<b>Sound Active - Master Unit (Ceiling-mounted):</b> Sets the fixture to Master status for Master-Slave operation and the built in programs will be triggered by the sound. No data link is required; all fixtures can be set to this mode for Stand-alone operation.
<b>SOU2</b>	<b>Sound Active - Master Unit (Floor-mounted):</b> Sets the fixture to Master status for Master-Slave operation and the built in programs will be triggered by the sound. No data link is required; all fixtures can be set to this mode for Stand-alone operation.
<b>dnCo</b>	<b>DMX:</b> The fixture will be controlled by a DMX signal coming from a DMX controller. The starting address must be selected.

## User Configurations

### TO SET THE PAN TO INVERTING OR NON-INVERTING:

- 1) Press <MODE> until **PAn** is displayed.
- 2) Use the <UP> and <DOWN> buttons to scroll through the two options. **nO** is non-inverting; **YES** is inverting.

### TO SET THE TILT TO INVERTING OR NON-INVERTING:

- 1) Press <MODE> until **tILT** is displayed.
- 2) Use the <UP> and <DOWN> buttons to scroll through the two options. **nO** is non-inverting; **YES** is inverting.

## Service Functions

### TO RESET THE FIXTURE:

- 1) Press the <MODE> button until **rEst** is displayed, and then press the <ENTER> button. The fixture will now reset itself.

### TO TURN THE LAMP POWER ON OR OFF:

- 1) Press the <MODE> button until **LAMP** is displayed.
- 2) Use the <UP> and <DOWN> buttons to select the desired option and then press the <ENTER> button. **On** turns the platform power on; **OFF** turns the platform power off.

## Operation

### Stand-Alone Mode (Sound-Active, Auto Mode):

This mode allows a single unit to run to the beat of the music, or the unit will auto change in Auto Mode.

- 1) Press <MODE/ESC> until **rUN** is displayed and press the <ENTER> button..
- 2) Use the <UP> and <DOWN> buttons to scroll through until the desired mode is displayed and press the <ENTER> button. **Pr61** is auto mode ceiling-mounted; **Pr62** is auto mode floor-mounted; **SOU1** is sound-active ceiling-mounted; **SOU2** is sound-active floor-mounted.
- 3) The unit will react to the low frequencies of music via the internal microphone in Sound Active mode, or the unit will auto change in Auto Mode.

## Master/Slave Mode (Master Sound, Master Auto):

This mode will allow you to link up to 32 units together without a controller.

- 1) Use standard DMX cables to daisy chain your units together via the DMX connector on the rear of the units. For longer cable runs we suggest a terminator at the last fixture. For more information about terminators, see page 9.
- 2) Choose a unit to function as the master. Press <MODE/ESC> until **rUN** is displayed on the master unit and press the <ENTER> button..
- 3) Use the <UP> and <DOWN> buttons to scroll through until the desired mode is displayed and press the <ENTER> button. **P-61** is auto mode ceiling-mounted; **P-62** is auto mode floor-mounted; **SOU1** is sound-active ceiling-mounted; **SOU2** is sound-active floor-mounted.
- 4) Press <MODE/ESC> until **rUN** is displayed on the slave units. Use the <UP> and <DOWN> buttons to scroll through until **SLAV** is displayed and press the <ENTER> button.

## DMX Mode

This mode allows the unit to be controlled by any universal DMX controller. If you are unfamiliar with DMX, please read the DMX Primer on page 18.

- 1) Press <MODE> until **rUN** is displayed.
- 2) Use the <UP> and <DOWN> buttons to locate **dnCo** and press the <ENTER> button.
- 3) Press <MODE> until **Addr** is displayed.
- 4) Use the <UP> and <DOWN> buttons to select the desired address and press the <ENTER> button.

## DMX Channel Values

CHANNEL	VALUE	FUNCTION
1	000 ⇄ 255	<b>Pan:</b> 128 = halfway point
2	000 ⇄ 255	<b>Tilt:</b> 128 = halfway point
3	000 ⇄ 255	<b>Pan Fine</b>
4	000 ⇄ 255	<b>Tilt Fine</b>
5	000 ⇄ 255	<b>Vector Speed</b> (Normal > Slow)
6	000 ⇄ 127	<b>Lamp &amp; Reset</b> No Function
	128 ⇄ 139	Lamp On & Reset
	140 ⇄ 229	No Function
	230 ⇄ 239	Lamp Off
	240 ⇄ 255	No Function
7	000 ⇄ 017	<b>Color Wheel</b>
		White (Open)

	018 ⇄ 035	Red
	036 ⇄ 051	Blue
	052 ⇄ 071	Green
	072 ⇄ 089	Purple
	090 ⇄ 107	Color Correction: 6000K
	108 ⇄ 127	Color Correction: 3200K
	128 ⇄ 187	Rainbow Effect (Slow > fast)
	188 ⇄ 195	No Function
	196 ⇄ 255	Reverse Rainbow Effect (Slow > Fast)
<b>8</b>	000 ⇄ 255	<b>Cyan</b> (0 – 100%)
<b>9</b>	000 ⇄ 255	<b>Magenta</b> (0 – 100%)
<b>10</b>	000 ⇄ 255	<b>Yellow</b> (0 – 100%)
<b>11</b>	000 ⇄ 255	<b>CMY Speed</b> (Fast > Slow)
		<b>Color Macro</b>
	000 ⇄ 015	No Function
	016 ⇄ 023	Macro 1
	024 ⇄ 031	Macro 2
	032 ⇄ 039	Macro 3
	040 ⇄ 047	Macro 4
	048 ⇄ 055	Macro 5
	056 ⇄ 063	Macro 6
	064 ⇄ 071	Macro 7
	072 ⇄ 079	Macro 8
	080 ⇄ 087	Macro 9
	088 ⇄ 095	Macro 10
	096 ⇄ 103	Macro 11
	104 ⇄ 111	Macro 12
	112 ⇄ 119	Macro 13
<b>12</b>	120 ⇄ 127	Macro 14
	128 ⇄ 135	Macro 15
	136 ⇄ 143	Macro 16
	144 ⇄ 151	Macro 17
	152 ⇄ 159	Macro 18
	160 ⇄ 167	Macro 19
	168 ⇄ 175	Macro 20
	176 ⇄ 183	Macro 21
	184 ⇄ 191	Macro 22
	192 ⇄ 199	Macro 23
	200 ⇄ 207	Macro 24
	208 ⇄ 215	Macro 25
	216 ⇄ 223	Macro 26
	224 ⇄ 231	Macro 27
	232 ⇄ 239	Macro 28
	240 ⇄ 247	Macro 29
	248 ⇄ 255	Macro 30
		<b>Effect Wheel</b>
<b>13</b>	000 ⇄ 070	No Function
	071 ⇄ 180	Beam Shaper
	181 ⇄ 255	Frost
<b>14</b>	000 ⇄ 255	<b>Zoom:</b> Out > In
		<b>Strobe</b>
	000 ⇄ 031	No Function
	032 ⇄ 063	Open
	064 ⇄ 095	Strobe (Slow > Fast)
	096 ⇄ 127	Open
	128 ⇄ 130	No Function
	131 ⇄ 159	Pulse Strobe (Slow > Fast)
	160 ⇄ 191	Open
	192 ⇄ 223	Random Strobe (Slow > Fast)
	224 ⇄ 255	Open
<b>16</b>	000 ⇄ 255	<b>Dimmer</b> Closed > Open (0 – 100%)



## General Troubleshooting

Symptom	Solution(s)	Applies to			
		Lights	Foggers & Snow	Controllers	Dimmers & Chaser
Auto shut off	Check fan thermal switch reset	✓			
Beam is very dim or not bright	Clean optical system or replace lamp Check 220/110v switch for proper setting	✓			
Breaker/Fuse keeps blowing	Check total load placed on device				✓
Chase is too slow	Check users manual for speed adjustment	✓		✓	✓
Device has no power	Check for power on Mains. Check device's fuse. (internal and/or external)	✓		✓	✓
Fixture is not responding	Check DMX Dip switch settings for correct addressing Check DMX cables Check polarity switch settings	✓			
Fixture is on but there is no movement to the audio	Make sure you have the correct audio mode on the control switches. If audio provided via ¼" jack, make sure a live audio signal exists Adjust sound sensitivity knob	✓		✓	✓
Lamps cuts off sporadically	Possible bad lamp or fixture is overheating. Lamp may be at end of its life.	✓			
Light will not come on after power failure	Some discharge lamps require a cooling off period before the electronics in the fixture can kick start it again, wait 5 to 10 minutes before powering up	✓			
Loss of signal	Use only DMX cables Install terminator Note: Keep DMX cables separated from power cables or black lights.	✓	✓	✓	✓
Moves slow	Check 220/110v switch for proper setting	✓			
No flash	Re-install bulb, may have shifted in shipping	✓			
No laser output	Bounce mirror motor may have shifted during shipping, readjust	✓			
No light output	Check slip ring & brushes for contact Install bulb Call service technician	✓			
Relay will not work	Check reset switch Check cable connections				✓
Remote does not work	Make sure connector is firmly connected to device	✓	✓		
Stand alone mode	All Chauvet lighting fixtures featuring stand-alone functions do not require additional settings, simply power the fixture and it will automatically enter into this mode	✓			

**If you still have a problem after trying the above solutions, please contact CHAUVET Technical Support at the location on the next page.**

## Technical Support

Address: Service Dept.  
3000 N 29th Ct, Hollywood, FL 33020 (U.S.A.)  
Support (Email): tech@chauvetlighting.com  
Telephone: (954) 929-1115 - (Press 4)  
Fax: (954) 929-5560 - (Attention: Service)  
Website: <http://www.chauvetlighting.com>

# 5. APPENDIX

## DMX Primer

There are 512 channels in a DMX-512 connection. Channels may be assigned in any manner. A fixture capable of receiving DMX 512 will require one or a number of sequential channels. The user must assign a starting address on the fixture that indicates the first channel reserved in the controller. There are many different types of DMX controllable fixtures and they all may vary in the total number of channels required. Choosing a start address should be planned in advance. Channels should never overlap. If they do, this will result in erratic operation of the fixtures whose starting address is set incorrectly. You can however, control multiple fixtures of the same type using the same starting address as long as the intended result is that of unison movement or operation. In other words, the fixtures will be slaved together and all respond exactly the same.

DMX fixtures are designed to receive data through a serial Daisy Chain. A Daisy Chain connection is where the DATA OUT of one fixture connects to the DATA IN of the next fixture. The order in which the fixtures are connected is not important and has no effect on how a controller communicates to each fixture. Use an order that provides for the easiest and most direct cabling. Connect fixtures using shielded two conductor twisted pair cable with three pin XLR male to female connectors. The shield connection is pin 1, while pin 2 is Data Negative (S-) and pin 3 is Data positive (S+). CHAUVET carries 3-pin XLR DMX compliant cables, DMX-10 (33'), DMX-4.5 (15') and DMX-1.5 (5')

## General Maintenance

To maintain optimum performance and minimize wear fixtures should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned at least twice a month. Dust build up reduces light output performance and can cause overheating. This can lead to reduced lamp life and increased mechanical wear. Be sure to power off fixture before conducting maintenance.

Unplug fixture from power. Use a vacuum or air compressor and a soft brush to remove dust collected on external vents and internal components. Clean all glass when the fixture is cold with a mild solution of glass cleaner or Isopropyl Alcohol and a soft lint free cotton cloth or lens tissue. Apply solution to the cloth or tissue and drag dirt and grime to the outside of the lens. Gently polish optical surfaces until they are free of haze and lint.

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics. Clean with soft cloth using normal glass cleaning fluid. - Always dry the parts carefully. - Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

## Returns Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Merchandise Authorization Number (RA #). Products returned without an RA # will be refused. Call CHAUVET and request RA # prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. CHAUVET reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

**Note:** If you are given an RA #, please include the following information on a piece of paper inside the box:

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) The RA #
- 5) A brief description of the symptoms

## Claims

Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise. It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Any other claim for items such as missing component/part, damage not related to shipping, and concealed damage, must be made within seven (7) days of receiving merchandise.

## Technical Specifications

### WEIGHT & DIMENSIONS

Length.....	16 in (406 mm)
Width .....	16 in (406 mm)
Height .....	23 in (584 mm)
Weight .....	75.8 lbs (34 kg)

### POWER

Operating Voltage (internally selectable) .....	100V, 115V, 208V, 230V - 50/60 Hz
AC input plug .....	IEC 60320 C14
Fuse.....	20mm Glass 15A 250V Fast Blow
Power consumption.....	720W
Inrush.....	1224W

### PHOTO OPTIC

Beam angle .....	26° - 34°
Pan .....	530°
Tilt.....	280°
Illuminance at 1m .....	3,430 fc (36,906 lux)

### LAMPS

Bulb .....	HMI 575W Lamp
------------	---------------

### CONTROL & PROGRAMMING

Data input .....	locking 3-pin XLR male socket
Data output .....	locking 3-pin XLR female socket
Data pin configuration .....	pin 1 shield, pin 2 (-), pin 3 (+)
Protocols.....	DMX-512 USITT
DMX Channels .....	16

### ORDERING INFORMATION

Q-Wash 575™ .....	Q-WASH575
-------------------	-----------

### WARRANTY INFORMATION

Warranty .....	2-year limited warranty
----------------	-------------------------