

**DMX Values**

| 1Ch | Channel | Function | Value     | Percent/Setting |
|-----|---------|----------|-----------|-----------------|
|     | 1       | Dimmer   | 000 ∘ 255 | 0–100%          |

| 2Ch | Channel | Function    | Value     | Percent/Setting |
|-----|---------|-------------|-----------|-----------------|
|     | 1       | Dimmer      | 000 ∘ 255 | 0–100%          |
|     | 2       | Dimmer Fine | 000 ∘ 255 | 0–100%          |

| 3Ch | Channel | Function    | Value                  | Percent/Setting                      |
|-----|---------|-------------|------------------------|--------------------------------------|
|     | 1       | Dimmer      | 000 ∘ 255              | 0–100%                               |
|     | 2       | Dimmer Fine | 000 ∘ 255              | 0–100%                               |
|     | 3       | Strobe      | 000 ∘ 010<br>011 ∘ 255 | No function<br>Strobe (slow to fast) |

| 6Ch | Channel | Function      | Value   | Percent/Setting   |
|-----|---------|---------------|---|---|
|     | 1       | Dimmer        | 000 ∘ 255   | 0–100%  |
|     | 2       | Dimmer Fine   | 000 ∘ 255   | 0–100%  |
|     | 3       | Strobe        | 000 ∘ 010<br>011 ∘ 255  | No function<br>Strobe (slow to fast)  |
|     | 4       | Auto Programs | 000 ∘ 010<br>011 ∘ 070<br>071 ∘ 130<br>131 ∘ 190<br>191 ∘ 255 | No function<br>Auto 1<br>Auto 2<br>Auto 3<br>Auto 4   |
|     | 5       | Auto Speed    | 000 ∘ 255   | Slow to fast  |
|     | 6       | Dimmer Speed  | 000 ∘ 051<br>052 ∘ 101<br>102 ∘ 152<br>153 ∘ 203<br>204 ∘ 255 | Preset dimmer speed from display menu<br>Dimmer speed mode off<br>Dimmer speed mode 1 (fastest)<br>Dimmer speed mode 2<br>Dimmer speed mode 3 (slowest) |