

**DMX Values**

**STD.P**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%
2	Fine Dimmer	000 ⇔ 255	Fine control (16-bit) (Step Duration if Custom 1–10 in CH. 13 is active)
3	Warm White	000 ⇔ 255	0–100% (Fade Duration if Custom 1–10 in CH. 13 is active)
4	Fine Warm White	000 ⇔ 255	Fine control (16-bit)
5	Cool White	000 ⇔ 255	0-100%
6	Fine Cool White	000 ⇔ 255	Fine control (16-bit)
7	White Macros	000 ⇔ 010	No function
		011 ⇔ 050	White 1
		051 ⇔ 080	White 2
		081 ⇔ 110	White 3
		111 ⇔ 140	White 4
8	Strobe	000 ⇔ 009	No function
		010 ⇔ 255	0-20 HZ
9	Zoom	000 ⇔ 255	0-100%
10	Zoom Control	000 ⇔ 200	No function
		201 ⇔ 220	Zoom reset
		221 ⇔ 255	No function

**STD.Y**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%
2	Fine Dimmer	000 ⇔ 255	Fine control (16-bit) (Step Duration if Custom 1–10 in CH. 13 is active)
3	Warm White	000 ⇔ 255	0–100% (Fade Duration if Custom 1–10 in CH. 13 is active)
4	Fine Warm White	000 ⇔ 255	Fine control (16-bit)
5	Cool White	000 ⇔ 255	0-100%
6	Fine Cool White	000 ⇔ 255	Fine control (16-bit)
7	White Macros	000 ⇔ 010	No function
		011 ⇔ 050	White 1
		051 ⇔ 080	White 2
		081 ⇔ 110	White 3
		111 ⇔ 140	White 4
8	Strobe	000 ⇔ 009	No function
		010 ⇔ 255	0-20 HZ
9	Zoom	000 ⇔ 255	0-100%
10	Zoom Control	000 ⇔ 200	No function
		201 ⇔ 220	Zoom reset
		221 ⇔ 255	No function

**STD.W**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%
2	Fine Dimmer	000 ⇔ 255	Fine control (16-bit) (Step Duration if Custom 1–10 in CH. 13 is active)
3	White Macros	000 ⇔ 010	No function
		011 ⇔ 050	White 1
		051 ⇔ 080	White 2
		081 ⇔ 110	White 3
		111 ⇔ 140	White 4
141 ⇔ 255	White 5		
4	Strobe	000 ⇔ 009	No function
		010 ⇔ 255	0-20 HZ
5	Zoom	000 ⇔ 255	0-100%
6	Zoom Control	000 ⇔ 200	No function
		201 ⇔ 220	Zoom reset
		221 ⇔ 255	No function

**UNO**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%