

## DMX Values

1Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ⇔ 255	0–100%

  

2Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ⇔ 255	0–100%
	2	Dimmer Fine	000 ⇔ 255	0–100%

  

3Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ⇔ 255	0–100%
	2	Dimmer Fine	000 ⇔ 255	0–100%
	3	Strobe	000⇔010 011⇔255	No function Strobe (slow to fast)

  

6Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ⇔ 255	0–100%
	2	Dimmer Fine	000 ⇔ 255	0–100%
	3	Strobe	000⇔010 011⇔255	No function Strobe (slow to fast)
	4	Auto Programs	000⇔010 011⇔070 071⇔130 131⇔190 191⇔255	No function Auto 1 Auto 2 Auto 3 Auto 4
	5	Auto Speed	000⇔255	Slow to fast
	6	Dimmer Speed	000⇔051 052⇔101 102⇔152 153⇔203 204⇔255	Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fastest) Dimmer speed mode 2 Dimmer speed mode 3 (slowest)