

Menu Map

Main Level	Programming Levels		Description
DMX Address	Address	001-508	Selects starting address (*highest channel restricted to personality chosen)
DMX Channel	1CH		1-channel: Dimmer
	2CH		2-channel: Dimmer, strobe
	5CH		5-channel: Dimmer, Strobe, Auto programs, Auto speed, Dimmer speed.
Static	Dimmer	000-255	Controls intensity
	Strobe		Controls strobe rate
Master/Slave	Master		Master mode
	Slave		Slave mode
Dimmer Mode	Off		Linear dimmer
	Dimmer 1		Fast dimmer curve
	Dimmer 2		Medium dimmer curve
	Dimmer 3		Slow dimmer curve
Back Light	On		Display back light always on
	10s		Turns off display backlight after 10 sec of inactivity
	20s		Turns off display backlight after 20 sec of inactivity
	30s		Turns off display backlight after 30 sec of inactivity
LED Frequency	600Hz		Selects the PWM output frequency
	1200Hz		
	2000Hz		
	4000Hz		
	6000Hz		
	25KHz		
Information	Fixture Hours	----	Shows total product hours
	Version	V_._-V_._	Shows installed software version
	UID	-----	Shows product UID
Factory Setting	No		Reset to factory defaults
	Yes		

DMX Values

5 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%
2	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
3	Auto Programs	000 ⇔ 010	No function
		011 ⇔ 070	Auto Program 1
		071 ⇔ 130	Auto Program 2
		131 ⇔ 190	Auto Program 3
		191 ⇔ 255	Auto Program 4
4	Auto Speed	000 ⇔ 255	0-100%
5	Dimmer Speed	000 ⇔ 051	Preset dimmer speed from display menu
		052 ⇔ 101	Dimmer speed mode off
		102 ⇔ 152	Dimmer speed mode 1 (fastest)
		153 ⇔ 203	Dimmer speed mode 2
		204 ⇔ 255	Dimmer speed mode 3 (slowest)

2 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%
2	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

1 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%