


DMX CHART

DMX Values

Zones for DMX Control

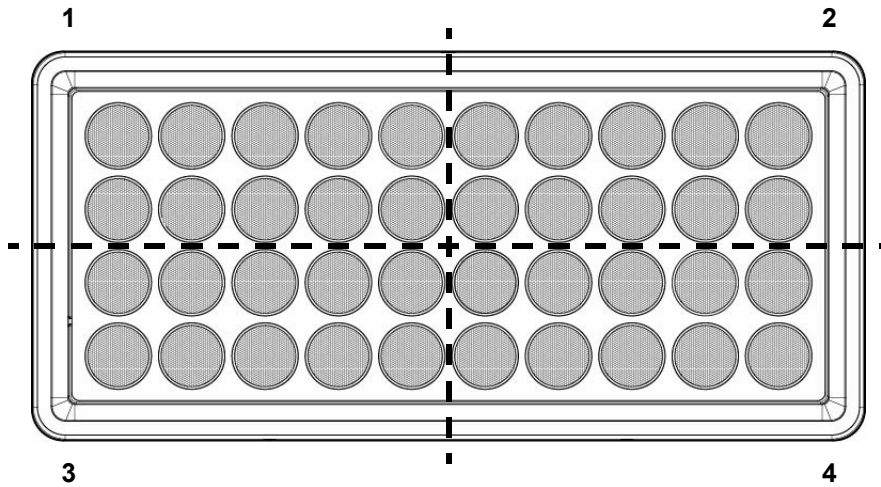

Color Macro Chart

Value	Percent/Setting		
000 ⇔ 010	No function		
011 ⇔ 030	Red: 100%	Green: 0–100%	Blue: 0%
031 ⇔ 050	Red: 100–0%	Green: 100%	Blue: 0%
051 ⇔ 070	Red: 0%	Green: 100%	Blue: 0–100%
071 ⇔ 090	Red: 0%	Green: 100–0%	Blue: 100%
091 ⇔ 110	Red: 0–100%	Green: 0%	Blue: 100%
111 ⇔ 130	Red: 100%	Green: 0%	Blue: 100–0%
131 ⇔ 150	Red: 100%	Green: 0–100%	Blue: 0–100%
151 ⇔ 170	Red: 100%	Green: 100–0%	Blue: 100%
171 ⇔ 200	Red: 100%	Green: 100%	Blue: 100%
201 ⇔ 205	Color 1		
206 ⇔ 210	Color 2		
211 ⇔ 215	Color 3		
216 ⇔ 220	Color 4		
221 ⇔ 225	Color 5		
226 ⇔ 230	Color 6		
231 ⇔ 235	Color 7		
236 ⇔ 240	Color 8		
241 ⇔ 245	Color 9		
246 ⇔ 250	Color 10		
251 ⇔ 255	Color 11		

23Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0–100%
2	Dimmer Fine	000 ⇄ 255	0–100%
3	Red 1	000 ⇄ 255	0–100%
4	Green 1	000 ⇄ 255	0–100%
5	Blue 1	000 ⇄ 255	0–100%
6	White 1	000 ⇄ 255	0–100%
7	Red 2	000 ⇄ 255	0–100%
8	Green 2	000 ⇄ 255	0–100%
9	Blue 2	000 ⇄ 255	0–100%
10	White 2	000 ⇄ 255	0–100%
11	Red 3	000 ⇄ 255	0–100%
12	Green 3	000 ⇄ 255	0–100%
13	Blue 3	000 ⇄ 255	0–100%
14	White 3	000 ⇄ 255	0–100%
15	Red 4	000 ⇄ 255	0–100%
16	Green 4	000 ⇄ 255	0–100%
17	Blue 4	000 ⇄ 255	0–100%
18	White 4	000 ⇄ 255	0–100%
19	Strobe	000 ⇄ 010 011 ⇄ 255	No function Strobe, slow to fast
20	Color Macro	000 ⇄ 255	See the Color Macro Chart
21	Auto Programs	000 ⇄ 010	No function
		011 ⇄ 032	Auto program 1
		033 ⇄ 054	Auto program 2
		055 ⇄ 076	Auto program 3
		077 ⇄ 098	Auto program 4
		099 ⇄ 120	Auto program 5 (Auto program 1–4)
		121 ⇄ 142	Auto program 6
		143 ⇄ 164	Auto program 7
		165 ⇄ 186	Auto program 8
		187 ⇄ 208	Auto program 9
		209 ⇄ 230	Auto program 10
231 ⇄ 255	Auto program 11 (Auto program 6–10)		
22	Auto Program Speed	000 ⇄ 255	Auto speed, slow to fast
23	Dimmer Speed Mode	000 ⇄ 051	Preset dimmer speed from display menu
		052 ⇄ 101	Dimmer speed mode off
		102 ⇄ 152	Dimmer speed mode 1 (fastest)
		153 ⇄ 203	Dimmer speed mode 2
		204 ⇄ 255	Dimmer speed mode 3 (slowest)

16Ch

Channel	Function	Value	Percent/Setting
1	Red 1	000 ⇄ 255	0–100%
2	Green 1	000 ⇄ 255	0–100%
3	Blue 1	000 ⇄ 255	0–100%
4	White 1	000 ⇄ 255	0–100%
5	Red 2	000 ⇄ 255	0–100%
6	Green 2	000 ⇄ 255	0–100%
7	Blue 2	000 ⇄ 255	0–100%
8	White 2	000 ⇄ 255	0–100%
9	Red 3	000 ⇄ 255	0–100%
10	Green 3	000 ⇄ 255	0–100%
11	Blue 3	000 ⇄ 255	0–100%
12	White 3	000 ⇄ 255	0–100%
13	Red 4	000 ⇄ 255	0–100%
14	Green 4	000 ⇄ 255	0–100%
15	Blue 4	000 ⇄ 255	0–100%
16	White 4	000 ⇄ 255	0–100%

DMX CHART

11Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	White	000 ⇔ 255	0–100%
7	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
8	Color Macro	000 ⇔ 255	See the Color Macro Chart
9	Auto Programs	000 ⇔ 010	No function
		011 ⇔ 032	Auto program 1
		033 ⇔ 054	Auto program 2
		055 ⇔ 076	Auto program 3
		077 ⇔ 098	Auto program 4
		099 ⇔ 120	Auto program 5 (Auto program 1–4)
		121 ⇔ 142	Auto program 6
		143 ⇔ 164	Auto program 7
		165 ⇔ 186	Auto program 8
		187 ⇔ 208	Auto program 9
		209 ⇔ 230	Auto program 10
231 ⇔ 255	Auto program 11 (Auto program 6–10)		
10	Auto Program Speed	000 ⇔ 255	Auto speed, slow to fast
11	Dimmer Speed Mode	000 ⇔ 051	Preset dimmer speed from display menu
		052 ⇔ 101	Dimmer speed mode off
		102 ⇔ 152	Dimmer speed mode 1 (fastest)
		153 ⇔ 203	Dimmer speed mode 2
		204 ⇔ 255	Dimmer speed mode 3 (slowest)

7Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	White	000 ⇔ 255	0–100%
7	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast

4Ch

Channel	Function	Value	Percent/Setting
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%
4	White	000 ⇔ 255	0–100%