
DMX Values

1Ch

| Channel | Function | Value | Percent/Setting |
|---------|----------|-----------|-----------------|
| 1 | Dimmer | 000 ⇔ 255 | 0–100% |

2Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------|-----------|-----------------|
| 1 | Dimmer | 000 ⇔ 255 | 0-100% |
| 2 | Dimmer Fine | 000 ⇔ 255 | 0-100% |

3Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------|-----------|----------------------|
| 1 | Dimmer | 000 ⇔ 255 | 0-100% |
| 2 | Dimmer Fine | 000 ⇔ 255 | 0-100% |
| 3 | Strobe | 000 ⇔ 010 | No function |
| | | 011 ⇔ 255 | Strobe, slow to fast |

6Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------------|-----------|---------------------------------------|
| 1 | Dimmer | 000 ⇔ 255 | 0-100% |
| 2 | Dimmer Fine | 000 ⇔ 255 | 0-100% |
| 3 | Strobe | 000 ⇔ 010 | No function |
| | | 011 ⇔ 255 | Strobe, slow to fast |
| 4 | Auto programs | 000 ⇔ 010 | No function |
| | | 011 ⇔ 080 | Auto program 1 |
| | | 081 ⇔ 160 | Auto program 2 |
| | | 161 ⇔ 240 | Auto program 3 |
| | | 241 ⇔ 255 | No function |
| 5 | Auto Speed | 000 ⇔ 255 | 0-100% |
| 6 | Dimmer Speed Mode | 000 ⇔ 051 | Preset dimmer speed from display menu |
| | | 052 ⇔ 101 | Dimmer speed off |
| | | 102 ⇔ 152 | Nonlinear dimming curve 1 (fastest) |
| | | 153 ⇔ 203 | Nonlinear dimming curve 2 |
| | | 204 ⇔ 255 | Nonlinear dimming curve 3 (slowest) |