

DMX CHART



www.chauvetprofessional.com

DMX Values

6 Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------------|---|---|
| 1 | Dimmer | 000 ⇔ 255 | 0–100% |
| 2 | Dimmer Fine | 000 ⇔ 255 | 0–100% |
| 3 | Strobe | 000 ⇔ 010 011 ⇔ 255 | No function Strobe, slow to fast |
| 4 | Auto Programs | 000 ⇔ 010 011 ⇔ 070 071 ⇔ 130 131 ⇔ 190 191 ⇔ 255 | No function Auto program 1 Auto program 2 Auto program 3 Auto program 4 |
| 5 | Auto Speed | 000 ⇔ 255 | 0–100% |
| 6 | Dimmer Speed Mode | 000 ⇔ 051 052 ⇔ 101 102 ⇔ 152 153 ⇔ 203 204 ⇔ 255 | No function Dimmer speed mode off Dimmer speed mode 1 Dimmer speed mode 2 Dimmer speed mode 3 |

3 Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------|------------------------|-------------------------------------|
| 1 | Dimmer | 000 ⇔ 255 | 0–100% |
| 2 | Dimmer Fine | 000 ⇔ 255 | 0–100% |
| 3 | Strobe | 000 ⇔ 010 011 ⇔ 255 | No function Strobe, slow to fast |

2 Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------|-----------|-----------------|
| 1 | Dimmer | 000 ⇔ 255 | 0–100% |
| 2 | Dimmer Fine | 000 ⇔ 255 | 0–100% |

1 Ch

| Channel | Function | Value | Percent/Setting |
|---------|----------|-----------|-----------------|
| 1 | Dimmer | 000 ⇔ 255 | 0–100% |