

### Model ID: OVATIONH605FC





# **EDITION NOTES**

The Ovation H-605FC User Manual includes a description, safety precautions, installation, programming, operation and maintenance instructions for the Ovation H-605FC as of the release of this edition.

## Trademarks

Chauvet, Chauvet Professional, the Chauvet logo and Ovation are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

# **Copyright Notice**

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

#### © Copyright 2022 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

#### Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

## **Document Printing**

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

### **Intended Audience**

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

## Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from <u>www.chauvetprofessional.com</u>

## **Document Revision**

This Ovation H-605FC User Manual is the 8<sup>th</sup> edition of this document. Go to <u>www.chauvetprofessional.com</u> for the latest version.



## TABLE OF CONTENTS

1.	Before You Begin	3
	What Is Included	3
	Claims	3
	Manual Conventions	3
	Symbols	3
	Safety Notes	4
	Personal Safety	4
	Mounting and Rigging	4
	Power and Wiring	4
	Operation	4
	Expected LED Lifespan	4
2	Introduction	5
۷.		
	Description	5
	Features	5
	Product Overview	6
	Product Dimensions	7
3.	Setup	8
	AC Power	8
	AC Plug	8
	Fuse Replacement	8
	DMX Linking	9
	DMX Personalities	9
	Alternate DMX Access Diagram	9
	Master/Slave Connectivity	9
	RDM (Remote Device Management)	10
	Wireless Operation	10
	Mounting	11
	Orientation	11
	Rigging	11
	Procedure	
4.	Operation	12
	Control Panel Operation	
	Control Options	12
	Programming	12
	Menu Map	12
	Configuration (DMX)	16
	DMX Personalities.	16
	DMX Control	16
	DMX Values	17
		18
	Configuration (Standalone)	19
	Auto Programs	19
	Master/Slave	19
	White Balance	19
	Virtual Color Wheel	20
	Manual Color Mixer	20 20
	Color Temperature Dimmer Profiles	
	LED Frequency	20
	Back Light	20
	Wireless Settings	20
	Fixture Hours/Software Version	20



RDM (Remote Device Management)	20
Emergency Mode	21
Factory Reset	21
Virtual Color Wheel	21
Virtual Color Wheel Chart	
Preset Color Temperature Chart	22
5. Technical Information	23
Product Maintenance	23
6. Technical Specifications	24
· · · · · · · · · · · · · · · · · · ·	
Returns	
Contact Us	-
	20



# 1. BEFORE YOU BEGIN

### What Is Included

- Ovation H-605FC
- 65°, 45° and 25° lenses

- 80° Filter
- Egg Crate
- Quick Reference Guide

## Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection. For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

# **Manual Conventions**

Convention	Meaning						
1–512	1–512 A range of values						
50/60	50/60 A set of values of which only one can be chosen						
<set></set>	A button on the product's control panel						
Settings	A product function or a menu option						

# Symbols

Symbol	Meaning
<u>A</u>	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
<u>_</u>	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
Í	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.



Any reference to data or power connections in this manual assumes the use of Seetronic IP rated cables.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.





## Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

### **Personal Safety**

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Do not touch the product's housing when operating because it may be very hot.

#### Mounting and Rigging

- This product is for indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. (IP20)
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.
- Never carry the product by the power cord.

#### Power and Wiring

- Make sure the power cord is not crimped or damaged.
- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- Never connect this product to a dimmer pack or rheostat.
- Make sure to replace the fuse with another of the same type and rating.
- Never disconnect this product by pulling or tugging on the power cable.

### Operation

- Do not operate this product if there is damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate the product at higher temperatures.
- In the event of a serious operation problem, stop using this product immediately!



#### If your Chauvet product requires service, contact Chauvet Technical Support.

## Expected LED Lifespan

Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.



# **2.** INTRODUCTION


### Description

The Ovation H-605FC is a silent LED house light that features full spectrum of hues with RGBAL LEDs. It comes standard with interchangeable lenses for adjustments for differing heights, 5-pin DMX and installed terminals for permanent and temporary installations. The product also features 16-bit dimming response, remote device management, and has adjustable PWM (pulse width modulation) to avoid flickering in filmed environments.

### Features


- 1, 3, 5, 7, 10, 12, 13 or 16-channel full color LED wash product
- Operating modes:
  - 1-channel: RGBAL, virtual color wheel, or color temperature
  - 3-channel: hue, saturation, value
  - 5-channel: dimmer, virtual color wheel, color temperature
  - 5-channel: RGBAL
  - 7-channel: RGBAL, dimmer, strobe
  - 10-channel: 16-bit dimmer, RGBAL, virtual color wheel, color temperature, strobe
  - 12-channel: RGBAL, dimmer, virtual color wheel, color temperature, strobe, auto program, auto speed, dimmer speed, control
  - 13-channel: 16-bit RGBAL and dimmer, strobe
- 16-channel: 16-bit RGBAL and dimmer, virtual color wheel, color temperature, strobe, control
- Full Color LED (RGBAL), convection cooled house light
- Interchangeable lens plates to adapt to different mounting heights
- 5-pin XLR and terminal blocks for DMX connections
- Use included yoke for pipe mounting, or suspend from integrated loop-eye
- · Virtual color wheel with color matched to popular gel colors
- Color Temperature Presets from 2,800 K to 6,500 K with high CRI & CQS
- 16-bit dimming for ultra-smooth fades
- DMX, WDMX and RDM (Remote Device Management) for added programming flexibility
- Adjustable PWM (Pulse Width Modulation) to avoid flickering on camera




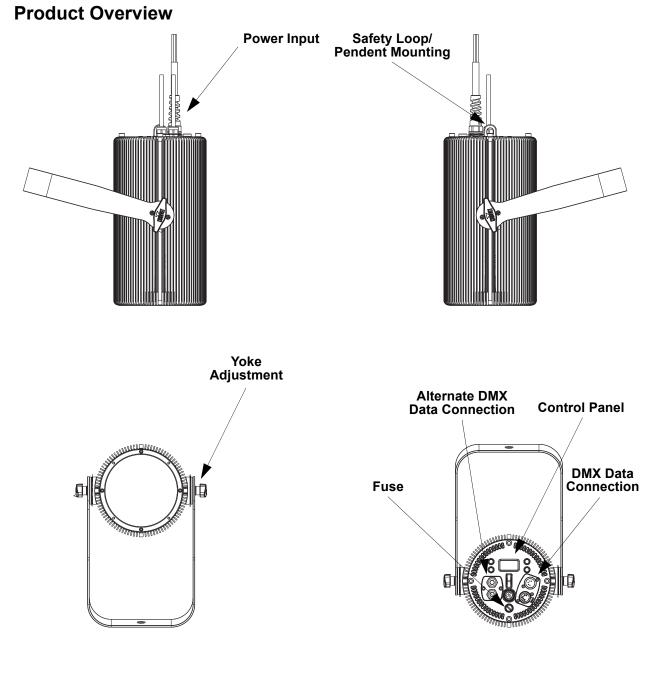




# **Product Dimensions**

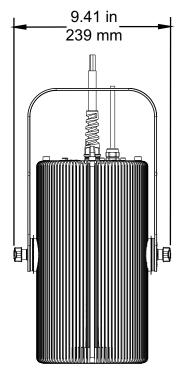

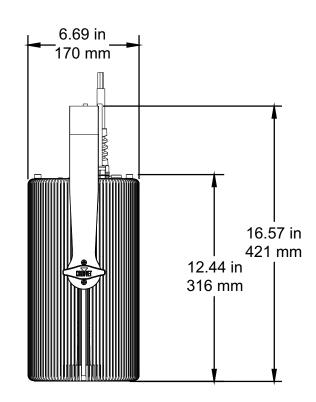

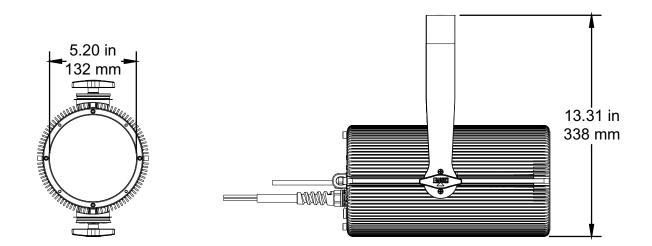



# 3. Setup

### **AC Power**

Each Ovation H-605FC has an auto-ranging power supply that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each Ovation H-605FC, refer to the label affixed to the product. You can also refer to the Technical Specifications chart in this manual. The listed current rating indicates the maximum current draw during normal operation. For more information, download Sizing Circuit Breakers from the Chauvet website: <a href="http://www.chauvetprofessional.com">www.chauvetprofessional.com</a>.

- Always connect the product to a protected circuit (circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.
- <u>/!</u>
- To eliminate unnecessary wear and improve its lifespan, during periods of nonuse completely disconnect the product from power via breaker or by unplugging it.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

# AC Plug

The Ovation H-605FC comes with a bare ended power input cord. The product side of this power cord enters the product through a strain reliever (rubber boot) and it cannot be disconnected from the product. Use the table below to wire the plug to the power cord.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color	
AC Live	Black	Brown	Yellow or Brass	
AC Neutral	AC Neutral White		Silver	
AC Ground	Green/Yellow	Green/Yellow	Green	



# The Ovation H-605FC includes a 15 ft., (4.5 m) cable attached to allow for pendent mounting

### **Fuse Replacement**

- 1. Disconnect this product from the power outlet.
- 2. Using a flat-head screwdriver, unscrew the fuse holder cap from the housing.
- 3. Remove the blown fuse and replace with another fuse of the same type and rating (T 3.15 A, 250 V).
- 4. Screw the fuse holder cap back in place and reconnect power.



Make sure to disconnect the product's power cord before replacing a blown fuse. Always replace the blown fuse with another of the same type and rating.



## DMX Linking


You can link the Ovation H-605FC to a DMX controller using a 5-pin DMX connection or hard wiring using the Phoenix connector. If using other DMX-compatible products with this product, you can control each individually with a single DMX controller.

### **DMX Personalities**

The Ovation H-605FC uses a DMX data connection for the 1-, 3-, 5-, 7-, 10-, 12-, 13-, 16-channel or HSV DMX personalities.

- Refer to the Introduction for a brief description of each DMX personality.
- Refer to the Operation chapter to learn how to configure the Ovation H-605FC to work in these personalities.
- The DMX Values section provides detailed information regarding the DMX personalities.

### Alternate DMX Access Diagram

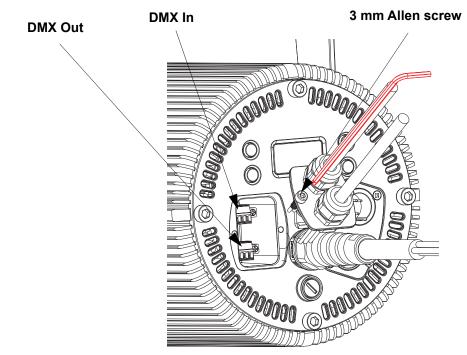

### Master/Slave Connectivity

The Master/Slave mode allows a Ovation H-605FC (the master) to control one or more Ovation H-605FC products (the slaves) without a DMX controller. One Ovation H-605FC becomes the master when running an auto or custom program, or by being in a Static mode.

You must configure each slave's control panel to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.

 The <u>Operation</u> section of this manual provides detailed instructions on how to configure the master and slaves.



 If you are not familiar with DMX standards or Master/Slave connectivity, download the DMX Primer from the Chauvet website <u>www.chauvetprofessional.com</u> for more information.



## **RDM (Remote Device Management)**

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. The Ovation H-605FC supports RDM protocol that allows feedback to monitor temperature and changes to DMX Address and DMX Channel menu options. Download the User Manual from <u>www.chauvetprofessional.com</u> for more details.

#### Wireless Operation

In optimal conditions, the Ovation H-605FC can operate up to 300 m (900 ft) away from the W-DMX transmitter. The W-DMX receiver in the Ovation H-605FC must be paired with the W-DMX transmitter for wireless operation.

#### Initial Setup

- 1. Turn the W-DMX transmitter on.
- 2. Connect the W-DMX transmitter to a DMX controller.
- 3. Place the Ovation H-605FC within 300 m from the W-DMX transmitter.
- 4. Disconnect any DMX cable from the Ovation H-605FC.
- 5. Turn the Ovation H-605FC on.

#### Configuration

- 1. From the Ovation H-605FC control panel, go to DMX Address.
- 2. Select the start address, as with any other DMX compatible product.
- 3. Go to Wireless Setting > Receive On/Off.
- 4. Select **On**. (The Signal Strength Indicator will show a ? in front of the bars)
- 5. Press the reset button on the W-DMX transmitter. (The Signal Strength Indicator on the Ovation H-605FC will show a 4 in front of the bars for 3 seconds while a connection is established.)

#### **Product Pairing**

If the Ovation H-605FC has already been paired with the W-DMX transmitter, the Signal Strength Indicator in the middle of the LCD screen will show the strength of the signal. In this case, the Ovation H-605FC is ready to work in Wireless mode. Pairing the Ovation H-605FC and a new W-DMX transmitter

- 1. From the Ovation H-605FC's control panel, go to Wireless Setting.
- 2. Select **Receive Reset**. The Signal Strength Indicator on the Ovation H-605FC will show a **?** in front of the bars.
- 3. From the W-DMX transmitter, press **<RESET>** (the Signal Indicator on the transmitter will flash).
- 4. Once the transmitter has found the Ovation H-605FC, the Signal indicator on the W-DMX transmitter will illuminate solid.
- 5. The Signal Strength Indicator in the middle of the LCD screen on the Ovation H-605FC will show the strength of the signal.



W-DMX operation can be interrupted or inhibited by liquid masses between the transmitter and receiver such as water, snow, or people. For best results, keep the area between the transmitter and receiver clear of any liquid mass.



## Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes. For our CHAUVET Professional line of mounting clamps, go to <u>http://trusst.com/products/</u>.

### Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

### Rigging


Chauvet recommends using the following general guidelines when mounting this product.

- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure onto which you are mounting the product can support the product's weight. See the <u>Technical Specifications</u> for weight information.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

### Procedure

The Ovation H-605FC comes with a double-bracketed yoke to which you can either attach mounting clamps for hanging or simply use as a floor stand. You must supply the mounting clamps. Make sure the clamps are capable of supporting the weight of this product. Use at least one mounting point per product. For the CHAUVET Professional line of mounting clamps, go to <u>http://www.trusst.com/products.</u>

### Mounting Diagram

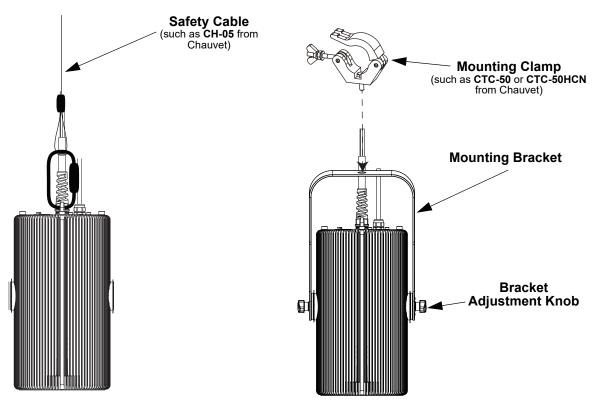





# 4. OPERATION

## **Control Panel Operation**

Button	Function						
<menu></menu>	ENU> Exits from the current menu or function						
<enter></enter>	Enables the currently displayed menu or sets the currently selected value in to the current function						
<up></up>	Navigates upward through the menu list or increases the numeric value when in a function						
<down></down>	Navigates downward through the menu list or decreases the numeric value when in a function						

# **Control Options**

Set the Ovation H-605FC starting address in the 001–512 DMX range. This enables control of up to 34 products in the 15-channel 15CH personality.

# Programming

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press **<MENU>** repeatedly until the option shows on the display. Press **<ENTER>** to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option shows on the display. Press <ENTER> to select. In this case, if there is another programming level, you will see that first option, or you will see the selected value.
- Press **<MENU>** repeatedly to exit to the previous main level.

# Menu Map

Refer to the Ovation H-605FC product page on <u>www.chauvetprofessional.com</u> for the latest menu map.

Main Level	Program	Description		
DMX Address	Address		001–512*	Selects starting address (*highest channel restricted to personality chosen)
	1CH	Color Ter	olor Wheel nperature olor Mixer	1-channel: RGBAL, virtual colo wheel,or color temperature
		3CH		3-channel: dimmer, virtual color wheel, color temperature
		5CH	5-channel: RGBAL	
		7CH	7-channel: RGBAL, dimmer, strobe	
	10CH			10-channel: 16-bit dimmer, RGBAL, virtual color wheel, colo temperature, strobe
DMX Channel	12CH			12-channel: RGBAL, dimmer, virtual color wheel, color temperature, red shift, strobe, auto program, auto speed, dimmer speed
		13CH	13-channel: 16-bit RGBAL and dimmer, strobe	
	16CH			16-channel: 16-bit RGBAL and dimmer, virtual color wheel, colo temperature, strobe, red shift
		HSV		3-channel: hue, saturation, value



Main Level		-	mming Leve	ls		Description						
	C3050 - Md Yellow											
		C3040 - Lt Yellow		1								
		C3240 - An	nb Yellow	ber								
		C2340 - V	Lt Amber									
		C2040 - L	t Amber									
		C2050 - M	d Amber	-								
		C2060 - D	k Amber	-								
		C1050 -	Lt Red	_								
		C1080 -	Md Red	_								
		C1020 - I	NC Pink	_								
		C1030 - I	Md Pink	_								
		C1630 - I	Dk Pink	_								
		C1250 - Md		-								
		C1060 - Dk I		-								
	VCW	C1650 - N		-		Virtual Color Wheel simulates the output of each gel color.						
	(Virtual	C6170 - Dk	-	-		Refer to the Virtual Color Whe						
	Color	C6020 - Lt		-		Chart section for specific						
	Wheel)	C5030 -		-		values.						
			020 - VLt Blue									
		C5430 - Lt Blue 2 C5070 - Blue C5050 - Md Blue										
				Dimmer								
				-								
		C5060 - I		-	000-							
		C5690 - Indigo		-	255							
		C5080 - VDk Blue										
VCW		C5081 - VI										
Virtual Color		C4370 - Yel Green		ļ								
Wheel)												
								C4070 - Green C4550 - Turquoise				
											•	-
		C4560 -	•									
		C4570 - BI		-								
			2800K	_		Preset white color temperatures. Emulates a tungsten lamp at the specified color temperature. Refer to th Preset Color Temperature Chart section for specific values.						
			3200K	-								
			3500K									
		сст	4000K									
		emperature)	4500K									
	•	• •	5000K									
			5600K									
			6000K									
			6500K	_								
			Re	-		Combine red green blue						
		МСМ	Gre			Combine red, green, blue, amber, and lime to make a						
		Color Mixer)	Blu			custom color						
	<b>\</b>	,	Aml			(0–100%)						
			Lin	ne								
				Off		Turns off the fade transition between colors						
			X-Ea	do Spood 4		Creates fade transition						
	O al a M		X-Fade Speed 1 Speed X-Fade Speed 2			between colors when using						
	Color X-	Fade Speed		•		colors in the Virtual Color						
				ade Speed 3 Wheel or Co ade Speed 4 chart, from fa		Wheel or Color Temperature chart, from fast (X-Fade Spee 1) to slow (X-Fade Speed 4)						



Main Level	Progra	mming Leve	els	Description
	Auto 1			
	Auto 2		-	
Auto Show	Auto 3		1–100	Selects automatic programs and auto program speed
	Auto 4			and auto program speed
	Auto 5			
Red Shift		On		Mimics halogen lamp dimming
		Off		
Master/Slave		Master		Master mode
		Slave		Slave mode
		Linear		
Dimmer Curve		Square Square		Sets the dimmer curve
Curve				
	·	SCurve Off		Linear dimmer
Dimmor	п	immer 1		Fast dimmer curve
Dimmer Mode		immer 2		Medium dimmer curve
Mode		immer 2		Slow dimmer curve
	U			Uses factory default white
		Off		setting
		Red		Sets red LED maximum value
		Green		Sets green LED maximum
White Balance				value
Dulunoc	Manual	Blue	125–255	Sets blue LED maximum value Sets amber LED maximum
		Amber		value
		Lime		Sets lime LED maximum value
		600Hz	_	
		1200Hz		
LED		2000Hz	Selects the PWM output	
Frequency		4000Hz 6000Hz	frequency	
		25KHz		
		25882	Turns off display backlight afte	
		10 sec of inactivity		
Back Light	30S			Turns off display backlight after 30 sec of inactivity
-		2 Min		Turns off display backlight after
	A I			2 minutes of inactivity
	AI	ways On	On	Display backlight always on Turns on the wireless setting
	Receive On/C	Off	Off	Turns on the wireless setting
Wireless			No	Resets and pairs the Ovation
Setting	Receive Res	et		H-605FC with a wireless
		~	Yes	transmitter
		Turns product on when DMX		
Emergency		On		signal is lost
Emergency Mode		On Off		No action is taken when DMX signal is lost
	Fixture Hours		Н	No action is taken when DMX signal is lost Shows total hours the product has been powered on
	Fixture Hours LED Hours		<sup>н</sup> <sup>н</sup>	No action is taken when DMX signal is lostShows total hours the product has been powered onShows the total hours the LED lights have been on
Mode				No action is taken when DMX signal is lostShows total hours the product has been powered onShows the total hours the LED

### **O**PERATION



Main Level	Programming Levels	Description
Factory	No	Reset to factory defaults
Setting	Yes	reset to lactory deladits



# **Configuration (DMX)**

Use DMX configurations to operate the product with a DMX controller.

### **DMX Personalities**

This setting allows you to choose a particular DMX personality.

- 1. Go to the **DMX Channel** main level.
- 2. Select the desired personality (1CH, 3CH, 5CH, 7CH, 10CH, 12CH, 13CH, 16CH, or HSV).



- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.
- Program the Channel 1 personality by choosing the attribute in the Menu Map

### DMX Control

In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- 1. Select a DMX personality as shown in DMX Personalities.
- 2. Set the starting address:
  - a. Go to DMX Address main level.
  - b. Select the starting address (001–510).

The highest recommended starting address for each DMX mode is as follows:

DMX Personality	DMX Address
16	498
13	500
12	501
10	503
7	506
5	508
3	510
1	512



### **DMX Values**

## 16Ch / 13Ch / 12Ch / 10Ch / 7Ch / 5Ch

5Ch	7Ch	10Ch	12Ch	13Ch	16Ch	Function	Value	e Percent/Setting
-	1	1	1	1	1	Dimmer	000⇔2	255 0–100%
-	-	2	-	2	2	Dimmer Fine	000 ⇔ 2	255 0–100%
1	2	3	2	3	3	Red		255 0–100%
-	-	-	-	4	4	Red Fine	000 ⇔ 2	255 0–100%
2	3	4	3	5	5	Green	000 ⇔ 2	255 0–100%
-	-	-	-	6	6	Green Fine	000 ⇔ 2	255 0–100%
3	4	5	4	7	7	Blue		255 0–100%
-	-	—	-	8	8	Blue Fine		255 0–100%
4	5	6	5	9	9	Amber		255 0–100%
-	-	-	-	10	10	Amber Fine		255 0–100%
5	6	7	6	11	11	Lime		255 0–100%
-	-	-	-	12	12	Lime Fine		255 0–100%
_	7	8	7	13	13	Strobe		010 No function
	•	Ŭ	-	10	10			255 Strobe, slow to fast
_	_	9	8	-	14	Virtual Color	000 ⇔ 2	255 Refer to the <u>Color Chart</u> section
						Wheel Color	000	for specific values
-	-	10	9	-	15	Temperature	000⇔∠	255 Refer to the <u>Color Temperature</u> <u>Chart</u> section for specific values
						remperature	000 ക 0	010 No function
								060 Auto program 1
_		_	10	_		Auto Programs	061 ⇔ 1	110 Auto program 2
-	_	_	10	_	_	Auto Frograms	111 ⇔ 1	160 Auto program 3
							161 ⇔ 2	210 Auto program 4
			11			Auto Speed		255 Auto program 5 255 Auto speed, slow to fast
-	-	-	11	-	-	Auto Speed		007 No function
								015 Dimmer Reset
								023 Red Shift On
								031 Red Shift Off
								039 Dimmer: S-Curve
								047 Dimmer: Linear
								055 Dimmer: Square
								063 Dimmer: Inverse Square
-	_	_	12	-	16	Control (hold for 3 seconds)		071 Dimmer Mode: Off
						s seconds)		079 Dimmer Mode 1
								087 Dimmer Mode 2
								095 Dimmer Mode 3
								103 X-Fade Speed: OFF
								111 X-Fade Speed: 1 (fastest)
								119 X-Fade Speed: 2
								127 X-Fade Speed: 3
								135 X-Fade Speed: 4 (slowest)
							136 ⇔ 2	255 Reserved for future use



### 3Ch / 1Ch

1Ch	3Ch	Function	Value		Value		Percent/Setting	
1	1	Dimmer	000 ⇔	255	0–100%			
-	2	Virtual Color Wheel	000 ⇔		Refer to the <u>Color Chart</u> section for specific values			
-	3	Color Temperature	000 ⇔	255	Refer to the <u>Color Temperature Chart</u> section for specific values			

### HSV

Channel	Function	Value	Percent/Setting
1	Hue	000 ⇔ 255	0–100%
2	Saturation	000 ⇔ 255	0–100%
3	Value	000 ⇔ 255	0–100%

## **Configuration (Standalone)**

Use standalone configuration to operate the product without a DMX controller.

#### Auto Programs

Auto programs allow for dynamic RGBAL color mixing without a DMX controller.

- 1. Go to the **Auto Show** main level.
- 2. Select the desired auto (Auto 1–5).
- 3. Select the desired speed (**Speed 0–100**).



#### The auto programs cannot be edited.

### **Red Shift**

The Red Shift function causes the amber LEDs to imitate the appearance of a halogen lamp when dimming. To adjust the Red Shift function, do the following:

- 1. Go to the Red Shift main level.
- 2. Select **On** or **Off**.

#### Master/Slave

The Master/Slave mode allows a group of Ovation H-605FC products (the slaves) to simultaneously duplicate the output of another Ovation H-605FC (the master) without a DMX controller. To set each of the slaves:

- 1. Go to the Master/Slave main level.
- 2. Select Slave.

To set the master:

- 1. Go to the Master/Slave main level.
- 2. Select Master.
- 3. Select an auto program as explained in Auto Programs, or VCW.
  - The master is the one that runs a program whether in Auto Program or VCW modes.



- Do not connect a DMX controller to the products configured for Master/ Slave operation. The DMX controller may interfere with signals from the master.
- The master should be the first product in the daisy chain.

#### **Dimmer Curve**

To set the dimmer curve, follow the instructions below:

- 1. Go to the Dimmer Curve main level.
- 2. Select the desired option (Linear, Square, I Square, or SCurve).

#### White Balance

This setting allows for selection of the white balance shown by the Ovation H-605FC when the color setting is **RGBAL** and the DMX controller's red, green, blue, amber, and lime faders are set to **255**.

- 1. Go to the White Balance main level.
- 2. Select **Manual** to continue to adjust the white balance or **Off** to default to the original factory setting.
- 3. Select a color (Red, Green, Blue, Amber or Lime).
- 4. Select a color value (**125–255**).
- 5. Repeat for the other colors.



The values of Red, Green, Blue, Amber and Lime configured will define the color temperature shown when the RGBAL faders are set to 255.



### **Virtual Color Wheel**

The Virtual Color Wheel mode allows for preset popular colors RGBAL color mixing without a DMX controller.

- 1. Go to the **VCW** (Virtual Color Wheel) main level.
- 2. Select VCW (Virtual Color Wheel).
- 3. Select the desired color from the Virtual Color Wheel Chart.
- 4. Press **<ENTER>** twice.
- 5. Use <UP> or <DOWN> to select the Dimmer value, from 000–255.
- 6. Press **<ENTER>**.

#### Manual Color Mixer

The Manual Color Mixer mode allows for permanent RGBAL color mixing without a DMX controller.

- 1. Go to the **VCW** main level.
- 2. Select MCM (Manual Color Mixer).
- 3. Select the desired color (Red, Green, Blue, Amber, or Lime).
- 4. Select the color value (000–255).
- 5. Repeat for the other colors.

#### Color Temperature

The color temperature mode allows for permanent white color temperature presets without a DMX controller.

- 1. Go to the **VCW** main level.
- 2. Select CCT (Color Temperature).
- 3. Select the desired color (2800K, 3200K, 3500K, 4000K, 4500K, 5000K, 5600K, 6000K, or 6500K).

#### **Dimmer Profiles**

This setting determines how fast the output of the Ovation H-605FC changes when you modify the values of the red, green, blue, amber, and dimmer faders. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

- Go to the Dimmer Mode main level.
- Select a dimmer curve (OFF, Dimmer 1, Dimmer 2, or Dimmer 3).



**OFF:** The output is proportional (linear) to the dimmer and RGBAL channel values.

**Dimmer 1–3:** The output follows the dimmer and RGBAL channel values based on the corresponding dimmer curve, DIM1 being the fastest.

### LED Frequency

This option changes the Pulse Width Modulation (PWM) frequency of the LEDs on the Ovation H-605FC.

1. Go to the LED Frequency main level.

#### 2. Select PWM Frequency (600Hz, 1200Hz, 2000Hz, 4000Hz, 6000Hz, or 25Khz).

#### Back Light

This setting allows for selection of the amount of time the back light on the Ovation H-605FC's display stays on after the last button is pressed on the control panel.

- 1. Go to the **Back Light** main level.
- 2. Select Always On (remains on), 10S (10 seconds), 30S (30 seconds), or 2 Min (2 minutes).

### Wireless Settings

This mode allows you to control DMX wirelessly. For detailed setup of this feature see Wireless Operation. To disable this feature:

- 1. Go to Wireless Setting
  - 2. Select **Receive On/Off**.
  - 3. Select Off.

#### Fixture Hours/Software Version

This option displays the total number of hours the product has run, and the installed software version.

- 1. Go to the **Information** main level.
- 2. Select Fixture Hours, LED Hours, Version, or UID.

#### RDM (Remote Device Management)

This option displays the device UID#.

- 1. Go to the **Information** main level.
- 2. Select UID.



### **Emergency Mode**

This feature can be set to turn on the Ovation H-605FC in the event DMX signal is lost.

- 1. Go to the **Emergency Mode** main level.
- 2. Select **Device ID**.

#### Factory Reset

This option restores the Ovation H-605FC to the original factory settings.

- 1. Go to the **Factory Setting** main level.
- 2. Select Yes or No.

#### Virtual Color Wheel

The Ovation H-605FC includes a feature called the Virtual Color Wheel (VCW). This feature is available as a stand-alone control mode for manual use and also as a control channel in select DMX personalities. Over 30 pre-mixed colors, custom blended by our engineers, are available to call up for easier programming.

The DMX values used to mix these colors are provided below. You may adjust the overall intensity of the Ovation fixture in order to more closely replicate colors you are familiar with. A chart is available on our website www.chauvetprofessional.com to compare our pre-mixed colors with popular gel colors. This chart is for comparison purposes only and is not a representation that our pre-mixed colors match any of the gel colors listed.

DMX Channel Value	Display Readout	Red Value	Green Value	Blue Value	Amber Value	Lime Value
000 ⇔ 005		000	000	000	000	000
006 ⇔  013	C3050 - Md Yellow	233	163	020	123	255
014 ⇔  021	C3040 - Lt Yellow	224	158	047	255	231
022 ⇔  028	C3240 - Amb Yellow	180	060	000	245	255
029 ⇔  035	C2340 - VLt Amber	245	107	081	255	213
036 ⇔ 043	C2040 - Lt Amber	230	130	062	255	155
044 ⇔  051	C2050 - Md Amber	255	000	025	255	194
052 ⇔ 059	C2060 - Dk Amber	255	000	024	255	150
060 ⇔ 067	C1050 - Lt Red	255	037	027	030	038
068 ⇔ 075	C1080 - Md Red	255	004	017	000	000
076 ⇔ 083	C1020 - NC Pink	238	135	129	255	255
084 ⇔  091	C1030 - Md Pink	255	131	120	255	195
092 ⇔  099	C1630 - Dk Pink	250	165	123	255	210
100 ⇔  107	C1250 - Md Red Amber	255	000	041	195	055
108 ⇔  115	C1060 - Dk Red Amber	255	000	045	120	030
116 ⇔  121	C1650 - Magenta	255	050	115	255	115
122 ⇔ 130	C6170 - Dk Magenta	255	035	117	000	000
131 ⇔ 138	C6020 - Lt Lavender	127	122	142	251	255
139 ⇔  146	C5030 - Lt Blue	000	255	197	100	255
147 ⇔ 154	C5020 - VLt Blue	158	255	189	000	255
155 ⇔ 162	C5430 - Lt Blue 2	000	255	180	000	243
163 ⇔  170	C5070 - Blue	043	255	210	043	036
171 ⇔ 178	C5050 - Md Blue	000	255	218	000	181
179 ⇔ 186	C5060 - Dk Blue	000	210	206	000	118
187 ⇔ 194	C5690 - Indigo	065	000	210	040	055
195 ⇔ 202	C5080 - VDk Blue	000	203	230	000	040
203 ⇔ 210	C5081 - VDk Blue 2	040	199	240	000	045
211 ⇔  218	C4370 - Yel Green	027	255	028	016	104
219 ⇔ 226	C4070 - Green	049	255	055	120	090
227 ⇔ 234	C4550 - Turquoise	060	230	109	000	245
235 ⇔ 242	C4560 - Aqua	020	240	126	036	255
243 ⇔ 250	C4570 - Blue Green	000	255	079	030	053
251 ⇔ 255		000	000	000	000	000

#### Virtual Color Wheel Chart



Note: The colors above are simulated renditions of the color output produced as compared to other similar incandescent products. Chauvet makes no guarantee of the color output accuracy.



#### **Preset Color Temperature Chart**

DMX Channel Value	Display Readout	Red Value	Green Value	Blue Value	Amber Value	Lime Value
000 ⇔ 005		000	000	000	000	000
006 ⇔  025	2800K	255	199	107	253	255
026 ⇔  050	3200K	253	247	129	255	255
051 ⇔ 075	3500K	234	255	141	253	255
076 ⇔ 100	4000K	204	255	156	243	255
101 ⇔ 125	4500K	181	248	166	224	255
126 ⇔ 150	5000K	160	255	180	241	255
151 ⇔  175	5600K	138	255	191	241	255
176 ⇔ 200	6000K	147	255	193	203	255
201 ⇔ 225	6500K	142	251	197	187	255
226 ⇔ 255		000	000	000	000	000



Note: The color temperatures above are simulated renditions of the color output produced as compared to a tungsten lamp at the specified color temperature. Chauvet makes no guarantee of the color output accuracy.



# **5. TECHNICAL INFORMATION**

## **Product Maintenance**

To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

Clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean the product:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- 4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.



# 6. TECHNICAL SPECIFICATIONS

### **Dimensions and Weight**

Dimensions and We	əight						
Length	W	/idth	Heig	ht	Weight		
13.11 in (333 mm)	9.44 in	(240 mm)	ım) 13.34 in (339 mn		nm) 19.6 lb (8.9 kg)		
Note: Dimensions in in Power	ches rounded to	o the nearest h	undredth.				
Power Supply	Туре	Rai	nge	Voltage Selection			
Switching (inte	rnal)	100 to 240 V	AC, 50/60 Hz	Auto-ranging			
Parameter	r	120 V,	60 Hz	230 V, 50 Hz			
Consumptio	n	155	5 W		146 W		
Operating Cur	rent	1.27	75 A		0.662 A		
Fuse		T 3.15 A, 250 V		Т 3.	.15 A, 250 V		
Power I/O		U.S./C	anada	N	/orldwide		
Power input con	nector	Hard-	wired	H	lard-wired		
Power Cord p	lug	Bare-	wired	В	are-wired		
Light Source							
Туре			Power		Lifespan		
LED		2 to	2 to 3 W		50,000 hours		
Color			Quantity		Current		
RGBAL		12 eac	12 each color		800 mA		
Photometrics							
Parameter	80° Filter		_ens	45° Lens	25° Lens		
Beam Angle	40°		1°	39°	19°		
Field Angle	80°	79	-	66°	37°		
Illuminance @ 5 m	163 lux	171	lux	349 lux	1,047 lux		
Thermal							
	cternal Tempera	ature		Cooling Syst			
113	5 °F (45 °C)			Convection	n		
DMX							
I/O		Channel Range					
• •	Phoenix connec	ctor	2	2, 4, 5, 8, 11, 13,	14 or 16		
Ordering							
Product Nar		Item		UPC Number			
Ovation H-605FC	<b>`</b>		1307	781462216559			
Ovation H-605FC	(Black)	0303	1315	781	462216634		



UL 1573 © CSA C22.2 No. 166 E113093





# RETURNS

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



# Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Once you have the RMA number, provide the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



# **CONTACT US**

General Information	Technical Support
Chauvet World Headquarters	
Address: 5200 NW 108th Ave.	Voice: (844) 393-7575
Sunrise. FL 33351	Fax: (954) 756-8015
Voice: (954) 577-4455	Email: <u>chauvetcs@chauvetlighting.com</u>
Fax: (954) 929-5560	Entern <u>onderstool@onderstagning.com</u>
Toll Free: (800) 762-1084	Website: www.chauvetprofessional.com
Chauvet U.K.	
Address: Unit 1C	Email: UKtech@chauvetlighting.eu
Brookhill Road Industrial Estate	
Pinxton, Nottingham, UK	Website: www.chauvetprofessional.eu
NG16 6NT	
Voice: +44 (0) 1773 511115	
Fax: +44 (0) 1773 511110	
Chauvet Benelux	
Address: Stokstraat 18	Email: <u>BNLtech@chauvetlighting.eu</u>
9770 Kruishoutem	
Belgium	Website: www.chauvetprofessional.eu
Voice: +32 9 388 93 97	
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin	Email: <u>FRtech@chauvetlighting.fr</u>
France	Website: <u>www.chauvetprofessional.eu</u>
Voice: +33 1 78 85 33 59	
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen	Email: <u>DEtech@chauvetlighting.de</u>
Germany	Website: <u>www.chauvetprofessional.eu</u>
Voice: +49 421 62 60 20	
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2)	Email: <u>servicio@chauvet.com.mx</u>
Zona Industrial Lerma	Website: www.chauvetprofessional.mx
Lerma, Edo. de México, CP 52000	
Voice: +52 (728) 690-2010	

Visit the applicable website above to verify our contact information and instructions to request support. Outside the US, UK, Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.