


# SYNAPSE

## User Manual

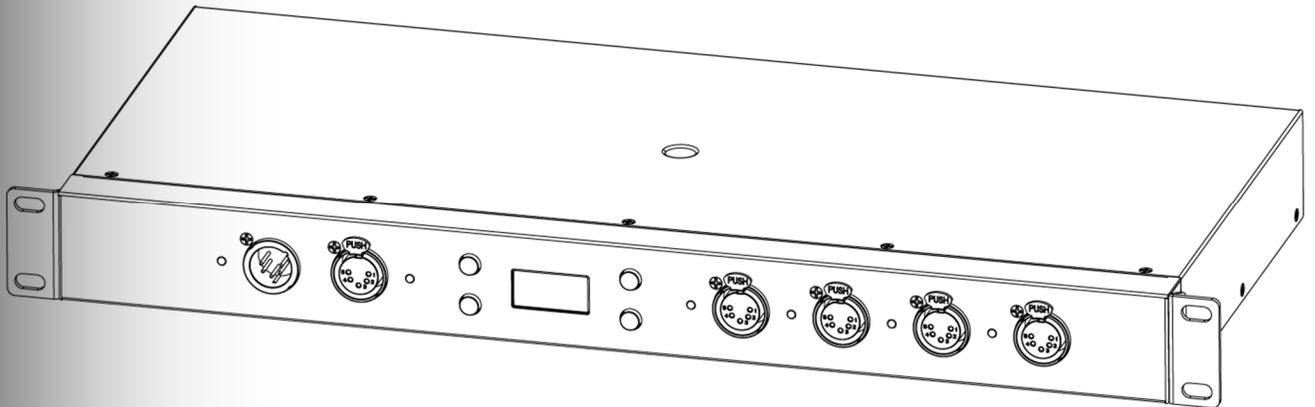

  
**CHAUVET**  
PROFESSIONAL

**Edition Notes** The Synapse 4 User Manual Rev. 3 covers the description, safety precautions, installation, programming, operation, and maintenance of the Synapse 4. Chauvet released this edition of the Synapse 4 User Manual in January 2020.

**Trademarks** CHAUVET is a registered trademark of CHAUVET & Sons LLC. (d/b/a CHAUVET or Chauvet). The CHAUVET logo in its entirety including the CHAUVET name and the dotted triangle, and all other trademarks in this manual pertaining to services, products, or marketing statements are owned or licensed by Chauvet. Any other product names, logos, brands, company names, and other trademarks featured or referred to within this document are the property of their respective trademark holders.

**Copyright Notice** Chauvet owns the content of this User Manual in its entirety, including but not limited to pictures, logos, trademarks, and resources.

© **Copyright 2020 Chauvet. All rights reserved.**

Electronically published by Chauvet in the United States of America.

**Manual Use** Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

**Document Printing** For better results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure your printer to scale the content accordingly.

**Intended Audience** Any person in charge of installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

**Disclaimer** Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility for any errors or omissions in this document. Chauvet reserves the right to revise and make changes to the content of this document without obligation that Chauvet notify any person or company of such revision or changes. This does not in any way constitute a commitment by Chauvet to make such changes. Chauvet may issue a revision of this manual or a new edition to incorporate such changes.

**Document Revision** The Synapse 4 User Manual Rev. 3 is the first edition of this manual. Go to [www.chauvetprofessional.com](http://www.chauvetprofessional.com) for the latest version.

# Table of Contents

<b>1. Before You Begin .....</b>	<b>1</b>
What Is Included .....	1
Claims .....	1
Manual Conventions .....	1
Symbols .....	1
Product At A Glance .....	2
Safety Notes .....	2
Personal Safety .....	2
Mounting And Rigging .....	2
Power And Wiring .....	2
Operation .....	2
<b>2. Introduction .....</b>	<b>3</b>
Description .....	3
Features .....	3
Overview .....	4
Dimensions .....	5
<b>3. Setup .....</b>	<b>6</b>
AC Power .....	6
AC Plug .....	6
Resetting the Breaker .....	6
DMX Linking .....	6
DMX Personalities .....	6
Mounting .....	7
Orientation .....	7
Rigging .....	7
Procedure .....	7
<b>4. Operation .....</b>	<b>8</b>
Control Panel Description .....	8
Control Options .....	8
Programming .....	8
Menu Map .....	9
Menu Map (Cont.) .....	10
Configuration .....	11
Power Setup .....	11
Output Delay Setting .....	11
Date and Time Setting .....	11
Schedule Setup .....	12
Backlight .....	12
Software Information .....	12
Fixture Hours .....	12
DMX Control .....	12
DMX Personality .....	12
DMX Values .....	13
Returns .....	13
<b>5. Technical Information .....</b>	<b>14</b>
Product Maintenance .....	14
<b>6. Technical Specifications .....</b>	<b>15</b>

# 1. Before You Begin

- What Is Included**
- Synapse 4
  - Neutrik powerCON power cord
  - Quick Reference Guide

**Claims** Carefully unpack the product immediately and check the box to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

**Manual Conventions**

Convention	Meaning
<b>1–512</b>	A range of values in the text
<b>50/60</b>	A set of mutually exclusive values in the text
<b>&lt;SET&gt;</b>	A button on the product’s control panel
<b>Settings</b>	A product function or a menu option
<b>MENU&gt;Settings</b>	A sequence of menu options
<b>1–10</b>	A range of menu values from which to choose in a menu
<b>Yes/No</b>	A set of two mutually exclusive menu options in a menu
<b>ON</b>	A unique value to be entered or selected in a menu

**Symbols**

Symbols	Meaning
	Critical installation, configuration, or operation information. Failure to comply with this information may cause the product not to work, damage third-party equipment, or cause harm to the operator.
	Important installation or configuration information. Failure to comply with this information may keep the product from working.
	Useful information.



The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.

<b>Product At A Glance</b>	Use on Dimmer	⊘	Auto Programs	⊘
	Outdoor Use	⊘	Auto-Ranging Power Supply	✓
	Master/Slave	⊘	Replaceable Breaker	✓
	DMX	✓	User-Serviceable	⊘

**Safety Notes**

Read all the following Safety Notes before working with this product. These notes include important information about the installation, usage, and maintenance of this product.



**This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained Chauvet certified technicians. Do not open the housing or attempt any repairs.**



**All applicable local codes and regulations apply to proper installation of this product.**

**Personal Safety**

- Always disconnect this product from its power source before servicing.
- Always connect this product to a grounded circuit to avoid the risk of electrocution.
- The product is not intended for permanent installation.

**Mounting And Rigging**

- This product is for indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. (IP20)
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.

**Power And Wiring**

- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- Never connect this product to a dimmer pack or rheostat.
- Never disconnect this product by pulling or tugging on the power cable.

**Operation**

- Do not operate this product if you see damage on the housing, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at a higher temperature.
- In case of a serious operating problem, stop using this product immediately!




**In the unlikely event that your Chauvet product requires service, contact Chauvet Technical Support.**

## 2. Introduction


**Description** The Synapse 4 functions as a relay pack to control the power sent to individual lighting products. This product takes one powerCON input and branches it into four outputs, each of which can be powered off individually via DMX or an internal timer/scheduler. The product may be rack, truss or wall mounted. The Synapse 4 also includes a 4-port DMX opto-iso, allowing users to easily branch their DMX universe in multiple directions and amplify the signal after a long run.

- Features**
- 1 or 4-channel power output control
  - Operating modes:
    - 1-channel: All Power Output On/Off
    - 4-channel: Power Output 1–4 On/Off
  - Controllable powerCON relay pack and DMX optically isolated splitter/amplifier
  - Compounds the savings of LED fixtures by completely removing power when not in use
  - Individually control all 4 relays via DMX, DMX sensing or internal scheduler for specific on/off times every day
  - Optically isolated 5-pin DMX splitter provides an easy hub for running DMX to multiple locations
  - Convenient mounting options; rack mount, wall mount or clamped to truss

### Overview

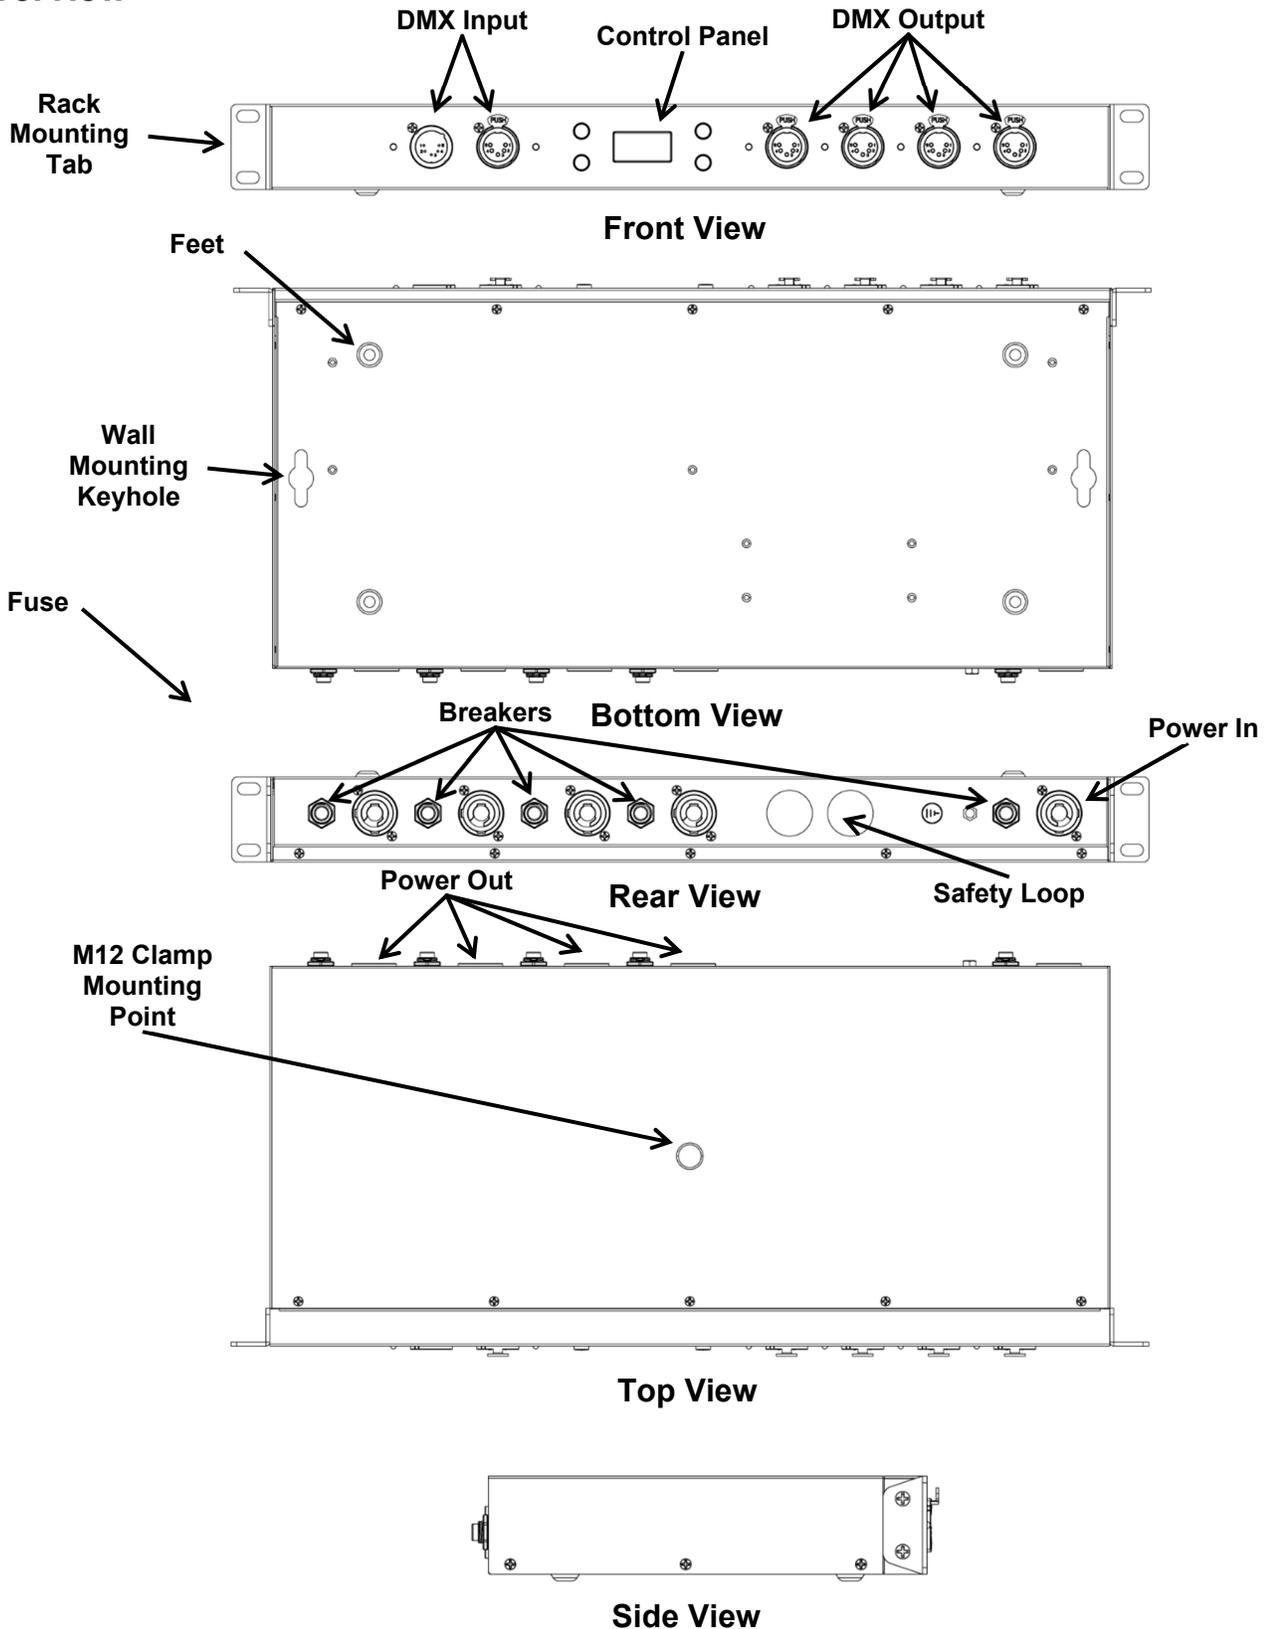

## Dimensions

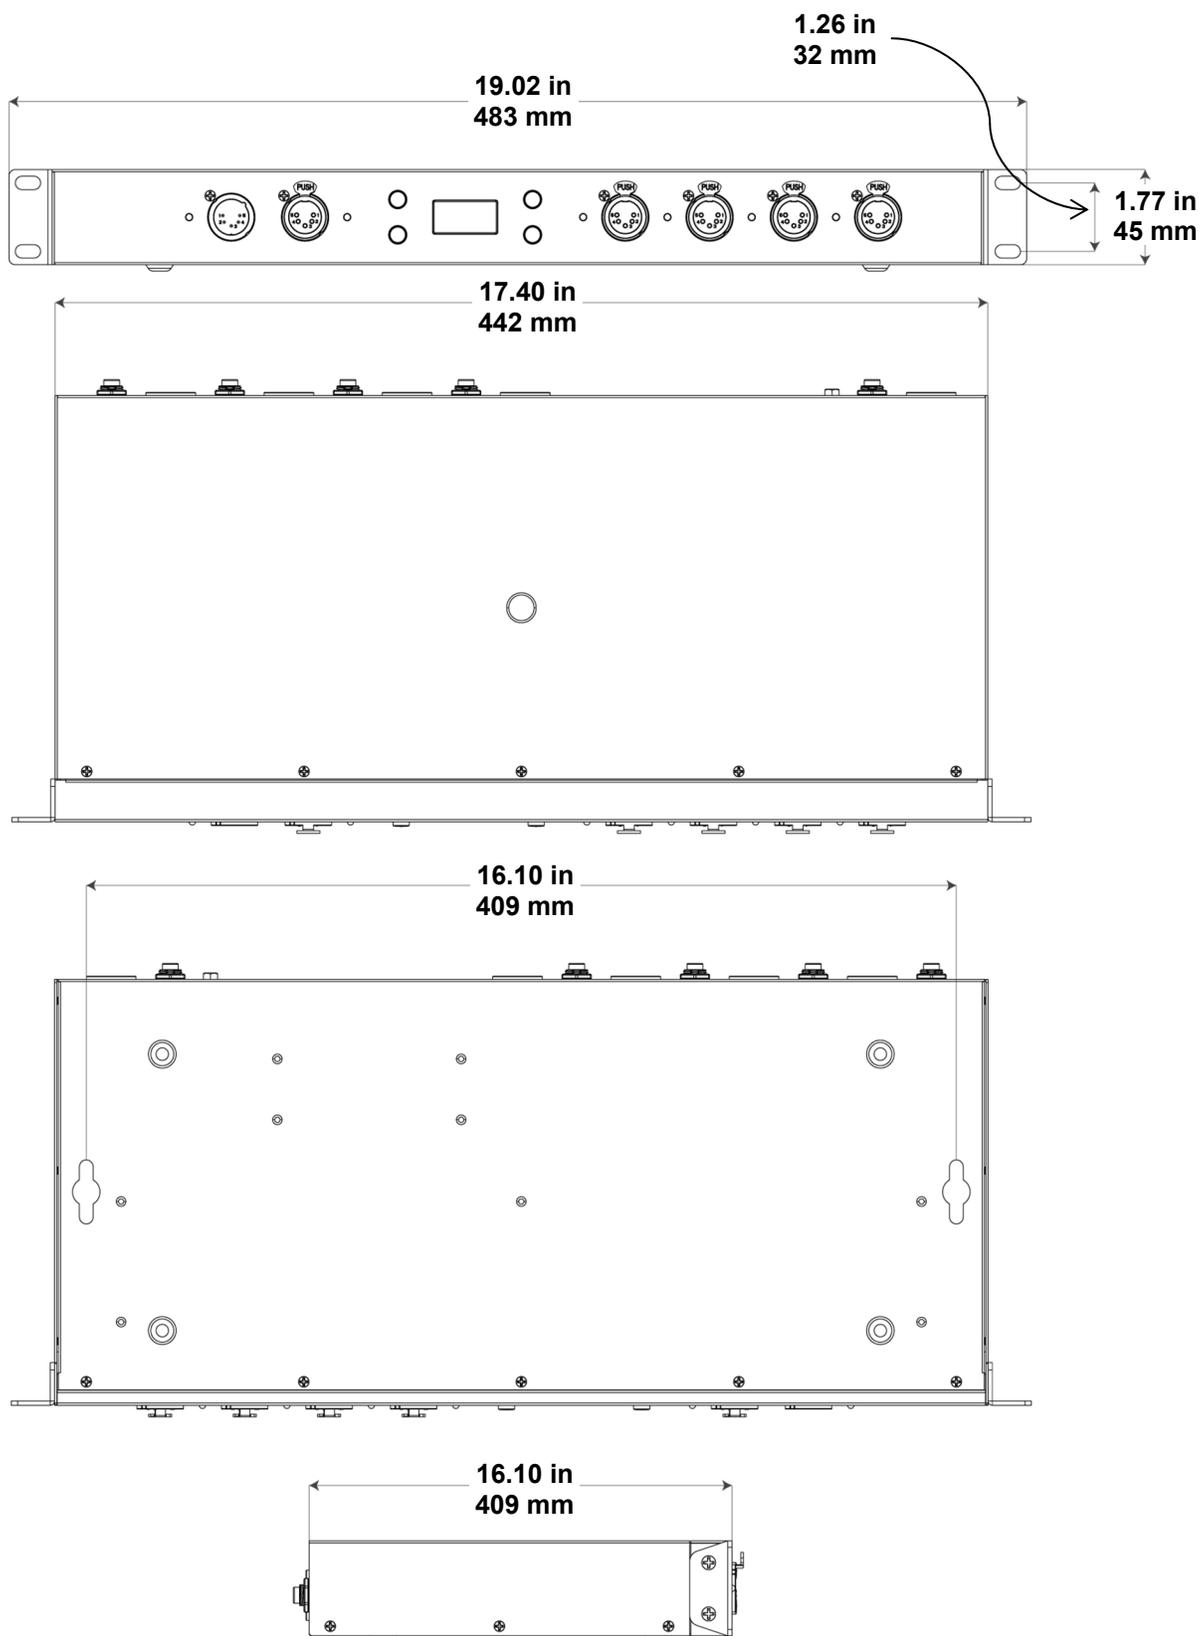

## 3. Setup

### AC Power

Each Synapse 4 has an auto-ranging power supply that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each Synapse 4, refer to the label affixed to the product. You can also refer to the [Technical Specifications](#) chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, you may download Sizing Circuit Breakers from the Chauvet website: [www.chauvetprofessional.com](http://www.chauvetprofessional.com).



**Always connect this product to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.**



**Never connect this product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.**

### AC Plug

The Synapse 4 comes with a power input cord terminated with a Neutrik powerCON A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need to change the Edison plug, use the table below to wire the new plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

### Resetting the Breaker

This product is equipped with a resettable circuit breaker on the power input circuit. If the breaker trips, all sections of this product will lose power. Refer to the following instructions for resetting the breaker.

This product is equipped with a resettable circuit breaker. If the breaker trips, all sections of this product will lose power.

1. Disconnect the product from power.
2. Allow the product to cool for 15 minutes.
3. After 15 minutes, try to reset the breaker by pressing the button until it latches in the operation position.
4. Connect the product to power and continue using as recommended.



**Disconnect this product from the power outlet before resetting the breaker. If the breaker does not reset (the breaker button/lever will not remain inserted/latched), contact Chauvet immediately. This indicates a possible internal malfunction.**

### DMX Linking

You can link the Synapse 4 to a DMX controller using a 5-pin DMX connection. If using other DMX-compatible products with the Synapse 4, you can control each individually with a single DMX controller.

### DMX Personalities

The Synapse 4 uses a 5-pin DMX data connection for the 1- and 4-channel DMX personalities.

- Refer to the [Introduction](#) chapter for a brief description of each DMX personality.
- Refer to the [Operation](#) chapter to learn how to configure the Synapse 4 to work in these personalities.
- The [DMX Values](#) section provides you with detailed information regarding the DMX personalities.



**If you are not familiar with or need more information about DMX standards, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: [www.chauvetprofessional.com](http://www.chauvetprofessional.com).**

**Mounting** Before mounting this product, read and follow the [Safety Notes](#). For our CHAUVET Professional line of mounting clamps, go to <http://trusst.com/products/>.

**Orientation** Always mount this product in a safe position and make sure there is adequate room for ventilation, configuration, and maintenance.


**Rigging** Chauvet recommends using the following general guidelines when mounting this product.

- When selecting an installation location, consider easy access to this product for operation, programming adjustments, and routine maintenance.
- Make sure to mount this product away from any flammable material as indicated in the [Safety Notes](#).
- Never mount in places where rain, high humidity, extreme temperature changes, or restricted ventilation may affect the product.
- If hanging this product, make sure that the mounting location can support the product's weight. See the [Technical Specifications](#) for the weight-bearing requirements of this product.
- When hanging this product, always secure to a fastening device using a safety cable. For our CHAUVET Professional line of safety cables, go to <http://trusst.com/products/>.

**Procedure** The Synapse 4 fits nicely in a standard 19" rack using the mounting tabs included. You may also choose to attach a M12 mounting clamp for hanging or simply place it on its feet on a flat level surface. Using the 2 keyhole cutouts, the Synapse 4 also gives you the option of mounting it to a wall. You must supply your own mounting hardware. Make sure all hardware and mounting surfaces are capable of supporting the weight of this product. For our CHAUVET Professional line of mounting clamps, go to <http://trusst.com/products/>.




**Floor Mounting**

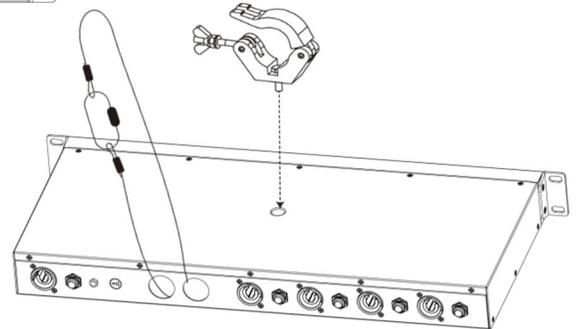

**Overhead Mounting**

**Mounting Diagram**

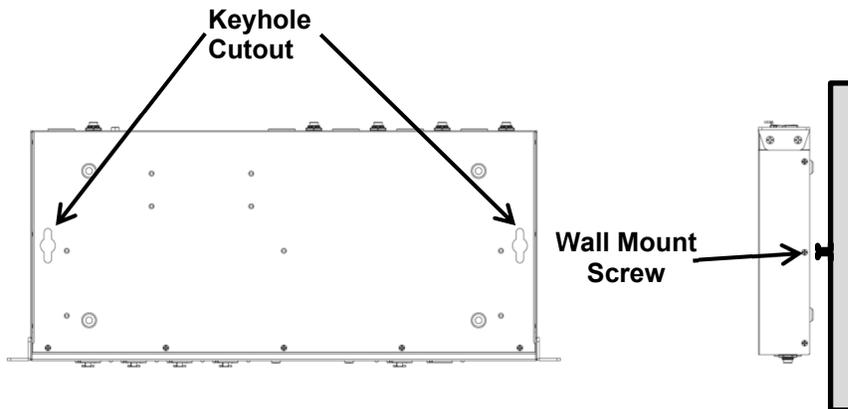

**Wall Mounting**

## 4. Operation

Control Panel Description	Button	Function
	<MENU>	Exits from the current menu or function
	<ENTER>	Enables the currently displayed menu or sets the currently selected value in to the current function
	<UP>	Navigates upward through the menu list or increases the numeric value when in a function
	<DOWN>	Navigates downward through the menu list or decreases the numeric value when in a function

**Control Options** You can set the Synapse 4 starting address in the **001–512** DMX range. This enables control of up to 4 outputs in the 4-channel **4CH** personality.

**Programming** Refer to the [Menu Map](#) to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press **<MENU>** repeatedly until the option shows on the display. Press **<ENTER>** to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press **<UP>** or **<DOWN>** until the option shows on the display. Press **<ENTER>** to select. In this case, if there is another programming level, you will see that first option, or you will see the selected value.
- Press **<MENU>** repeatedly to exit to the previous main level.

## Menu Map

Main Level	Programming Levels		Description		
Power Setup	Turn Off		Turns power to the power outputs on the back of the product off		
	Turn On		Turns power to the power outputs on the back of the product on		
	On/Off Via DMX		Turns power on/off thru DMX control		
	On If DMX On		Turns power on/off as a DMX signal is detected		
	Scheduler		Sets product to follow the assigned schedule		
Output Delay	All Power Ports	All Ports On		0-120 S	Sets a time delay to the power output
		All Ports Off			
	Unit Power Port	Power Port 1	Power Port 1 On		
			Power Port 1 Off		
		Power Port 2	Power Port 2 On		
			Power Port 2 Off		
		Power Port 3	Power Port 3 On		
			Power Port 3 Off		
		Power Port 4	Power Port 4 On		
			Power Port 4 Off		
Date & Time	Current Time 12/12/2014 00:00 Clock Setting	12/12/2014 00:00	Sets the current date and time		

### Menu Map (Cont.)

Main Level	Programming Levels				Description		
Scheduler	Event 1-8 On/Off	Scheduler On/Off		On	Activates the scheduler for the set event		
				Off			
		Power Output	All Power Ports	All Ports On	0-120 S	Sets which ports will turn on/off during the event	
				All Ports Off			
				Power Port 1			Power Port 1 On
							Power Port 1 Off
				Power Port 2			Power Port 2 On
							Power Port 2 Off
				Power Port 3			Power Port 3 On
							Power Port 3 Off
Power Port 4	Power Port 4 On						
	Power Port 4 Off						
Week Setup			Monday-Sunday Everyday	Sets the days the event will run			
Time Setup			00:00	Sets the time the event will run			
Back Light	On			Display backlight always on			
	10S			Turns off display backlight after 10 sec of inactivity			
	20S			Turns off display backlight after 20 sec of inactivity			
	30S			Turns off display backlight after 30 sec of inactivity			
Information	Fixture Hours			Shows total product hours			
	Version			Shows installed software version			
DMX Address	1-512			Selects DMX address (highest channel restricted to personality chosen)			
DMX Channels	1CH			1-channel: power port control			
	4CH			4-channel: individual power port control			

**Configuration** The Synapse 4 allows control from both the control panel and remotely via DMX.

**Power Setup** This option chooses how the power outputs are controlled.

1. Go to the **Power Setup** main level.
2. Select the desired control function.
  - a. **Turn Off** – turns all power outputs off
  - b. **Turn On** – turns all power outputs on
  - c. **On/Off Via DMX** – control of the power outputs is controlled via DMX
  - d. **On If DMX On** – Turns power outputs on/off as DMX is detected.
  - e. **Scheduler** – Product power output is controlled by the events set in the scheduler

**Output Delay Setting** This option sets how long the power outputs are delayed from turning on/off. This option is useful when turning on more than one high power draw product at the same time. Set the Synapse 4 or each of its 4 outputs to turn on at a different time to avoid overloading a power system.

1. Go to the **Output Delay** main level.
2. Choose **All Power Ports** or **Unit Power Port**
  - a. Select **All Power Ports**
    - Select **All Power Ports On**
    - Set the delay to turn on (**0-120 s**).
    - Select **All Power Ports Off**
    - Set the delay to turn off (**0-120 s**).
  - b. Select **Unit Power Port**
    - Select **Power Port (1, 2, 3, or 4)**
    - Select **Power Port (1, 2, 3, or 4) On**
    - Set the delay to turn on (**0-120 s**).
    - Select **Power Port (1, 2, 3, or 4) Off**
    - Set the delay to turn off (**0-120 s**).
    - Repeat for each power port number

**Date and Time Setting** This option sets the date and time. The date and time setting is needed in order for the scheduler option to work correctly.

1. Go to the **Date & Time** main level.
2. Select **Clock Setting**.
  - a. Enter the month (**00/**)
  - b. Enter the date (**/00/**)
  - c. Enter the year (**/2015**)
  - d. Enter the hour (**00:**)
  - e. Enter the minutes (**:00**)

- Schedule Setup** This option allows you to set 8 different events that turn on/off each of the power outputs at specific scheduled times.
1. Go to the **Scheduler** main level.
  2. Select **Event 1–8**
    - Select **On** or **Off**.
  3. Select **SchedulerOn/Off**
    - Select **On** or **Off**
  4. Select **Power Output**
    - a. Choose **All Power Ports**
      - Select **All Power Ports On**
      - Set the delay to turn on (**0-120 s**).
      - Select **All Power Ports Off**
      - Set the delay to turn off (**0-120 s**).
    - b. Choose **Power Port (1, 2, 3, or 4)**
      - Select **Power Port (1, 2, 3, or 4) On**
      - Set the delay to turn on (**0-120 s**).
      - Select **Power Port (1, 2, 3, or 4) Off**
      - Set the delay to turn off (**0-120 s**).
      - Repeat for each power port number
  5. Select **Week Setup**
    - Select **Monday – Friday** or **Everyday**
  6. Select **Time Setup**
    - a. Enter the hour (**00:**)
    - b. Enter the minutes (**:00**)

- Backlight** This setting allows you to set the amount of time the backlight on the Synapse 4’s display stays on after the last button is pressed on the control panel.
1. Go to the **Back Lite** main level.
  2. Select **On** (remains on), **10S** (10 seconds), **20S** (20 seconds), or **30S** (30 seconds).

- Software Information** This option shows what version of software the Synapse 4 is running.
1. Go to the **Information** main level.
  2. Select **Version** and the version number will show on the display.

- Fixture Hours** This option shows the total amount of hours the Synapse 4 has been turned on.
1. Go to the **Information** main level.
  2. Select **Fixture Hours** and the total number of hours will show on the display.

- DMX Control** In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.
1. Select a DMX personality as shown in [DMX Personality](#).
  2. Go to the **DMX Address** main level.
  3. Select the starting address (**001–512**).

The highest recommended starting address for each DMX mode is as follows:

DMX Personality	DMX Address
1 Ch	512
4 Ch	509

- DMX Personality** This setting allows you to choose a particular DMX personality.
1. Go to the **DMX Channel** main level.
  2. Select the desired personality (**1 Ch**, or **4 Ch**).



- See the [DMX Values](#) section for the highest starting address you can select for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

## DMX Values

1CH	Channel	Function	Value	Percent/Setting
	1	Power Output On/Off	000 ⇔ 152	No function
			153 ⇔ 255	Turn on
			255 ⇔ 103	No function
			102 ⇔ 000	Turn off
4CH	Channel	Function	Value	Percent/Setting
	1	Power Output 1 On/Off	000 ⇔ 152	No function
			153 ⇔ 255	Turn on #1
			255 ⇔ 103	No function
			102 ⇔ 000	Turn off #1
	2	Power Output 2 On/Off	000 ⇔ 152	No function
			153 ⇔ 255	Turn on #2
			255 ⇔ 103	No function
			102 ⇔ 000	Turn off #2
	3	Power Output 3 On/Off	000 ⇔ 152	No function
			153 ⇔ 255	Turn on #3
			255 ⇔ 103	No function
			102 ⇔ 000	Turn off #3
	5	Power Output 4 On/Off	000 ⇔ 152	No function
			153 ⇔ 255	Turn on #4
			255 ⇔ 103	No function
			102 ⇔ 000	Turn off #4

**Returns** You must send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



**DO NOT write the RMA number directly on the box. Instead, write it on a properly affixed label.**

Once you have received the RMA number, include the following information on a piece of paper inside the box:

- Your name
- Your address
- Your phone number
- The RMA number
- A brief description of the problem(s)

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. FedEx packing or double-boxing is recommended.



**Chauvet reserves the right to use its own discretion to repair or replace returned product(s).**

## 5. Technical Information

### Product Maintenance

To maintain optimum performance and minimize wear, you should clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

As a rule, clean this product at least twice a month. Dust build-up reduces performance and can cause overheating. This can lead to reduced product life and increased mechanical wear.

To clean your product:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
4. Clean all external surfaces with a mild solution of non-ammonia glass cleaner or isopropyl alcohol.
5. Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
6. Wipe any dirt or grime to the outside edges of the surface.
7. Gently polish the surfaces until they are free of haze and lint.



**Always dry the external surfaces thoroughly and carefully after cleaning them.**

## 6. Technical Specifications

<b>Dimensions and Weight</b>	<b>Length</b>	<b>Width</b>	<b>Height</b>	<b>Weight</b>
	19.0 in (483 mm)	7.87 in (200 mm)	1.75 in (45 mm)	6 lb (2.8 kg)
<b>Note:</b> Dimensions in inches rounded to the nearest decimal digit.				
<b>Power</b>	<b>Power Supply Type</b>	<b>Range</b>		<b>Voltage Selection</b>
	Switching (internal)	100–240 VAC, 50/60 Hz		Auto-ranging
	<b>Parameter</b>	<b>120 VAC, 60 Hz</b>		<b>230 VAC, 50 Hz</b>
	Consumption	4 W		4 W
	Current	0.077 A		0.048 A
	Breaker	20 A, 250 V		20 A, 250 V
	<b>Power I/O</b>	<b>U.S./Canada</b>		<b>Worldwide</b>
Power input connector	Neutrik powerCON A		Neutrik powerCON A	
Power cord plug	Edison (U.S.)		Local plug	
<b>Thermal</b>	<b>Max. External Temperature</b>	<b>Cooling System</b>		
	113 °F (45 °C)	Convection		
<b>DMX</b>	<b>I/O Connectors</b>	<b>Connector Type</b>		<b>Channel Range</b>
	5-pin XLR	Sockets		1 or 4
<b>Ordering</b>	<b>Product Name</b>	<b>Item Code</b>		<b>UPC Number</b>
	Synapse 4	03081088		781462214364



UL 334  
C22.2 No. 14-13  
E113093



**Contact Us**

General Information	Technical Support
<b>Chauvet World Headquarters</b>	
Address: 5200 NW 108th Avenue Sunrise, FL 33351 Voice: (954) 577-4455 Toll free: (800) 762-1084	Voice: (844) 393-7575 Email: <a href="mailto:chauvetcs@chauvetlighting.com">chauvetcs@chauvetlighting.com</a>  Website: <a href="http://www.chauvetprofessional.com">www.chauvetprofessional.com</a>
<b>Chauvet Europe Ltd</b>	
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0)1773 511115	Email: <a href="mailto:uktech@chauvetlighting.com">uktech@chauvetlighting.com</a>  Website: <a href="http://www.chauvetlighting.co.uk">www.chauvetlighting.co.uk</a>
<b>Chauvet Europe BVBA</b>	
Address: Stokstraat 18 9770 Kruishoutem Belgium Voice: +32 9 388 93 97	Email: <a href="mailto:Eutech@chauvetlighting.com">Eutech@chauvetlighting.com</a>  Website: <a href="http://www.chauvetlighting.eu">www.chauvetlighting.eu</a>
<b>Chauvet France</b>	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: <a href="mailto:Eutech@chauvetlighting.com">Eutech@chauvetlighting.com</a>  Website: <a href="http://www.chauvetlighting.eu">www.chauvetlighting.eu</a>
<b>Chauvet Germany</b>	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: <a href="mailto:Eutech@chauvetlighting.com">Eutech@chauvetlighting.com</a>  Website: <a href="http://www.chauvetlighting.eu">www.chauvetlighting.eu</a>
<b>Chauvet Mexico</b>	
Address: Av. de las Partidas 34-3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Mexico C.P. 52000 Voice: +52 (728) 690-2010	Email: <a href="mailto:servicio@chauvet.com.mx">servicio@chauvet.com.mx</a>  Website: <a href="http://www.chauvetprofessional.mx">www.chauvetprofessional.mx</a>

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., U.K., Ireland, Benelux, France, Germany, or Mexico, contact the dealer of record.