# **User Manual**





## Model ID: MAVERICKFORCE2PROFILE





## **Edition Notes**

The Maverick Force 2 Profile User Manual includes a description, safety precautions, installation, programming, operation and maintenance instructions for the Maverick Force 2 Profile as of the release date of this edition.

## Trademarks

CHAUVET, the Chauvet logo and Maverick Force 2 Profile are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

## **Copyright Notice**

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

#### © Copyright 2021 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

### Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

## **Document Printing**

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

### **Intended Audience**

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

## Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from <u>www.chauvetprofessional.com</u>.

#### **Document Revision**

This Maverick Force 2 Profile User Manual is the 1<sup>st</sup> edition of this document. Go to <u>www.chauvetprofessional.com</u> for the latest version.



## TABLE OF CONTENTS

1.	Before You Begin	1
	What Is Included	1
	Claims	1
	Text Conventions	1
	Symbols	1
		1
	RE Exposure Warning for North America, and Australia	1
	Refer Notes	2
	RF Exposure Warning for North America, and Australia Safety Notes	2 2 2 2 2 2 2 2
	Personal Salety	2
	Mounting and Řigging	2
	Power and Wiring	2
	Operation	2
n	LAPected LLD Lifespari.	2
۷.	Introduction	3
	Description	3
	Features	3
	Product Overview	3
	Product Dimensions	4
3.	Setup	5
	AC Power	5
		5
	AC Plug Fuse Replacement	5
	Remote Device Management (RDM) USB Software Update	5 5 5 5 5 6
	USB Software Update	5
	Mounting	õ
	Orientation	6
		õ
	Rigging Procedure	6 6
	Signal Connections	7
	Control Personalities	7
	DMX Linking	7
	Art-Net™ Connection	7
	sACN Connection	7
	Connection Diagram	7
4	Operation.	8
••	Touchscreen Control Panel	8
	Control Panel Description	8
	Battery Powered Display	8
	Battery Powered Display Home Screen	8
	Control Panel Lock	8
	Passcode	8
		8
	Technician Mode	
		9
	Configuration (DMX, Art-Net™, sACN)	14
	Control Mode	14
	Control Personalities	14
	Starting Address	14
	Network Setup	14 14
	IP Mode	14
	Universe Manual IP Address	14
	Subnet Mask	14
	Control Channel Assignments and Values	15
	Dmx Mode 50 CH.	15
	Dmx Mode 33 CH.	18



Configuration (Settings)	22
Pan Reverse	22
Tilt Reverse	22
Screen Reverse	22
Pan Angle	22
Tilt Angle	22
Blackout on Movement	22
Touchscreen Calibration	22
Touchscreen Lock	22
Swap Pan and Tilt	22
WDMX Reset	22
Display Backlight Timer	23
Loss of Data	23
Fan Mode	23
Dimmer Curve	23
Pulse Width Modulation	23
LED Power	23
Minimum Zoom Focus	23
Preset Selection	23
Preset Synchronization	24
USB Update	24
Reset Function	24
Factory Reset	24
Test Mode	24
Auto Test	24
Manual Test	24
System Information	25
Offset Mode (Zero Adjust)	25
Web Server	25
Gobo Wheels	26
Gobo Dimensions	26
Gobo Replacement	27
5. Maintenance	28
Product Maintenance	28
6. Technical Specifications	29
Returns	30
Contact Us	31
	51



# 1. Before You Begin

### What Is Included

- Maverick Force 2 Profile
- Seetronic Powerkon IP65 Power Cord
- Omega Brackets with Mounting Hardware
- Quick Reference Guide

### Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection. For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

## **Text Conventions**

Convention	Meaning
1–512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
<enter></enter>	A key to be pressed on the product's control panel

## Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
Í	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.



# Any reference to data or power connections in this manual assumes the use of Seetronic IP rated cables.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.

## **FCC Compliance**

This device complies with Part 15 Part B of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## RF Exposure Warning for North America, and Australia

**Warning!** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



## Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.

All applicable local codes and regulations apply to proper installation of this product.

#### Personal Safety

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Do not touch the product's housing when operating because it may be very hot.

#### Mounting and Rigging

- The product is intended for professional use only.
- This product is for indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. (IP20)
- CAUTION: When transferring product from extreme temperature environments, (e.g., cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- The product should be positioned so that prolonged staring into it at a distance closer than 2.3 m is not expected.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.
- Never carry the product by the power cord.

#### Power and Wiring

- Make sure the power cord is not crimped or damaged.
- Ensure that the product is connected to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- Never connect this product to a dimmer pack or rheostat.
- Make sure to replace the fuse with another of the same type and rating.
- Never disconnect this product by pulling or tugging on the power cable.
- If the external flexible cable or cord of this product is damaged, it shall be replaced with a special cable or cord exclusively available from the manufacturer or its service agent.
- The light source contained in this luminaire shall only be replaced by the manufacturer, its service agent, or a similarly qualified person.

#### Operation

- Do not operate this product if there is damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate the product at higher temperatures.
- The minimum startup temperature is -4°F (-20°C). Do not start the product at lower temperatures.
- The minimum ambient temperature is -22°F (-30°C). Do not operate the product at lower temperatures.
- In the event of a serious operation problem, stop using this product immediately!



## If your Chauvet product requires service, contact Chauvet Technical Support.

## Expected LED Lifespan

Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.



# 2. Introduction


### Description

The Maverick Force 2 Profile is a lightweight, tour-grade moving head with a big presence. The powerful product features an output of over 20,000 lumens and an artillery of speedy effects housed in a deceptively compact frame, under 60lbs. The Maverick Force 2 Profile features CMY + CTO color-mixing, a color wheel with a CTB and CRI option, and an extensive zoom range of 7 to over 50 degrees that maintains a flat field of focus even when fully wide. A custom-built framing system containing 4 dual axis shutters with a 120-degree field of rotation, motorized iris, focus, zoom, and frost capabilities, alongside a 5-facet rotating prism give an abundance of tools for beam shaping. Two rotating glass gobo wheels featuring gobos created in collaboration with leading designers can be stacked on top of one another for dynamic effects. Control as you see fit with DMX, sACN, Art-Net or W-DMX.

### Features


- Fully featured, compact and lightweight 580 W LED yoke profile fixture including CMY + CTO color mixing, a 4-blade framing shutter system with rotation, a color wheel, 8:1 zoom, a 5-facet prism wheel, and 2 rotating gobo wheels
- 16-bit dimming of master dimmer for smooth control of fades
- Variable CMY + CTO color mixing system to create a wide pallet of colors
- · CRI and CTB filters on color wheel for added flexibility
- Two rotating, indexing and interchangeable slot and lock gobo wheels
- DMX, WDMX, sACN, and Art-Net for full flexibility of control options
- RDM control over DMX for fixture reporting
- 6.8° to 55.9° zoom range for variable beam sizes
- Iris, 5-facet prism and frost for beam control
- True 1 compatible power input
- Three setup menu presets and preset sync for cross loading to multiple like fixtures for easy shop setup
- USB slot for software uploads
- Battery backup display with auto-rotate depending on fixture orientation

## **Product Overview**

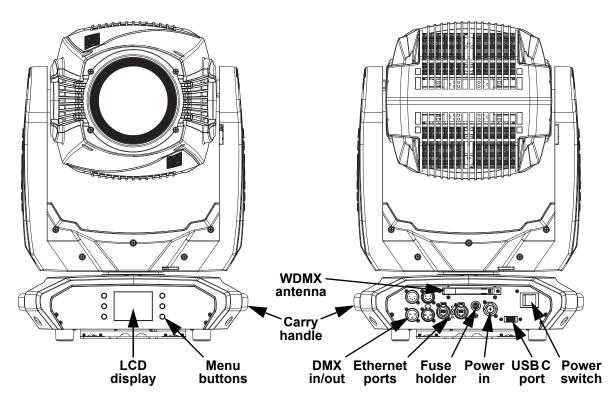



## **Product Dimensions**

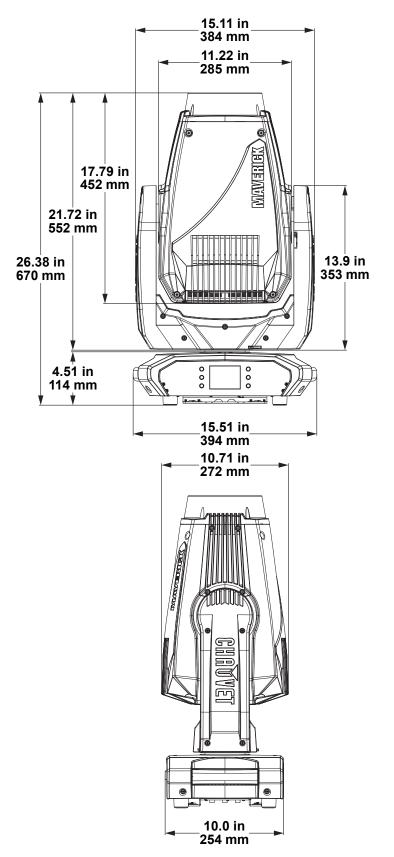




# 3. Setup

## **AC Power**

The Maverick Force 2 Profile has an auto-ranging power supply and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.

- Always connect the product to a protected circuit (a circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.

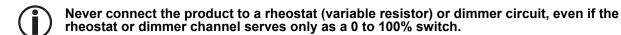

#### AC Plug

The Maverick Force 2 Profile comes with a power input cord terminated with a Seetronic Powerkon A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need the change the plug, use the table below to wire the new plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

#### **Fuse Replacement**

- 1. Disconnect this product from the power outlet.
- 2. Using a flat-head screwdriver, unscrew the fuse holder cap from the housing.
- 3. Remove the blown fuse and replace with another fuse of the same type and rating (F 20 A, 250 V).
- 4. Screw the fuse holder cap back in place and reconnect power.

### **Remote Device Management (RDM)**

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The Maverick Force 2 Profile supports RDM protocol that allows feedback to make changes to menu map options.

### **USB Software Update**

The Maverick Force 2 Profile allows for software update through USB using the built-in USB port. To update the software using the USB flash drive, do the following:

- 1. Power on the fixture and plug the flash drive into the USB port.
- 2. Once the flash drive has been detected, the message "Upgrade Firmware" will be displayed. Press <ENTER>. If a different message appears on the display, search for the updated software in the Menu (Updated Firmware). A list of the updated software files will be displayed.
- 3. Select the file that needs to be uploaded. The message "Are you sure?" will be displayed. Press <ENTER>.
- 4. If the selected file is correct, the update will be completed. Restart the product. If the selected file is incorrect, the update will fail, and the display will go back to the main interface. Repeat steps 1–3 using the correct file.



The .chl format file needs to be placed in the MAVERICK folder in the USB flash drive.





## Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes. For our CHAUVET Professional line of mounting clamps, go to <u>http://trusst.com/products/</u>.

#### Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

#### Rigging


Chauvet recommends using the following general guidelines when mounting this product.

- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure onto which you are mounting the product can support the product's weight. See the <u>Technical Specifications</u> for weight information.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.

#### Procedure

The Maverick Force 2 Profile comes with a bracket to which you can attach a mounting clamp directly. Mounting clamps are sold separately. Make sure the clamps are capable of supporting the weight of this product. Use at least two mounting points per product. For the CHAUVET Professional line of mounting clamps, go to <a href="http://www.trusst.com/products">http://www.trusst.com/products</a>.

#### Mounting Diagram

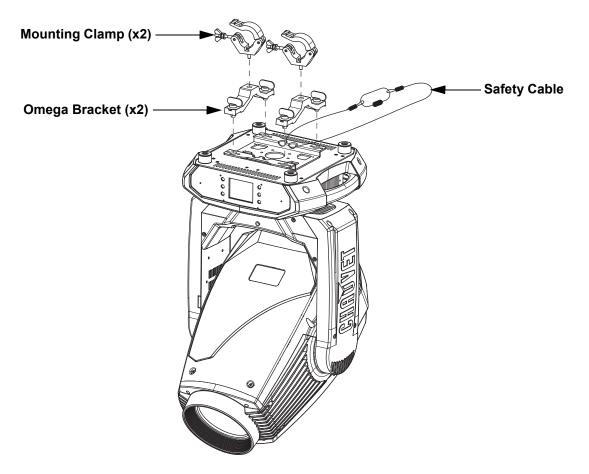



## **Signal Connections**

The Maverick Force 2 Profile can receive a DMX, Art-Net<sup>™</sup>, or sACN, signal. The Maverick Force 2 Profile has 2 Amphenol XLRnet through ports, and 3- and 5-pin DMX in and out ports. If using other compatible products with this product, you can control each individually with a single controller.

#### **Control Personalities**

The Maverick Force 2 Profile uses a 3 or 5-pin DMX data connection, WDMX, Art-Net<sup>™</sup>, or sACN for its 2 control personalities: **Dmx Mode 33 CH** and **Dmx Mode 50 CH**.

- Refer to the <u>Operation</u> chapter to learn how to configure the Maverick Force 2 Profile to work in these personalities.
- The <u>Control Channel Assignments and Values</u> section provides detailed information regarding the control personalities.



If you are not familiar with or need more information about DMX standards or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: <u>www.chauvetprofessional.com</u>.

### DMX Linking

You can link the Maverick Force 2 Profile to a DMX controller using a 3 or 5-pin DMX connection or a WDMX connection. For more information about DMX, read the DMX primer at: <u>https://www.chauvetprofessional.com/wp-content/uploads/2016/06/DMX\_Primer.pdf</u>.

#### Art-Net<sup>™</sup> Connection


Art-Net<sup>™</sup> is an Ethernet protocol that uses TCP/IP which transfers a large amount of DMX512 data using an Amphenol XLRnet RJ45 connection over a large network. An Art-Net<sup>™</sup> protocol document is available from <u>www.chauvetprofessional.com</u>.

Art-Net<sup>™</sup> designed by and copyright Artistic Licence Holdings Ltd.

#### sACN Connection

Also known as ANSI E1.31, streaming ACN is an Ethernet protocol that uses the layering and formatting of Architecture for Control Networks to transport DMX512 data over IP or any other ACN compatible network.

#### **Connection Diagram**

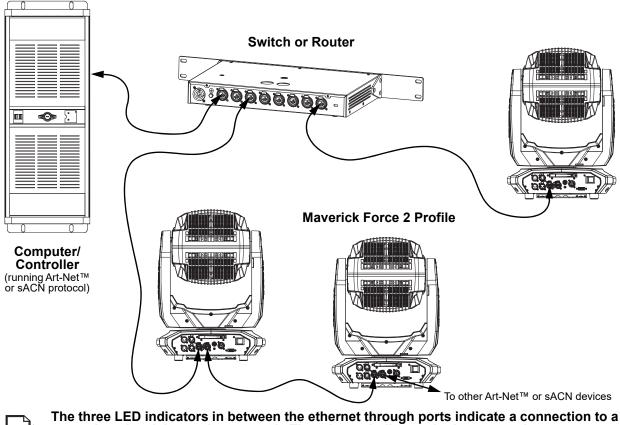

network and activity on that network. They do not indicate whether or not the Maverick Force 2 Profile is receiving a signal from a controller.



## 4. Operation

## Touchscreen Control Panel


The Maverick Force 2 Profile has a touchscreen display as well as 6 control buttons. Navigate the menu structure by pressing the buttons, touching the images of the buttons on the sides of the display, or touching the desired menu option on the display directly. The touchscreen can be locked and calibrated through the Setup options in the menu. (See <u>Touchscreen Calibration</u> and <u>Touchscreen Lock</u>.)

#### **Control Panel Description**

Button	Function
$\bigcirc$	Navigates upwards through the menu list or increases the numeric value when in a function
	Exits from the current menu or function
$\nabla$	Navigates downwards through the menu list or decreases the numeric value when in a function
$\langle \neg$	Navigates leftwards through the menu list
	Enables the currently displayed menu or sets the currently selected value into the selected function
$\Box$	Navigates rightwards through the menu list

#### **Battery Powered Display**

The Maverick Force 2 Profile has a battery powered display which enables access to the menu when the product is powered off. Press and hold **<MENU>** until the display activates (approximately 15 seconds).

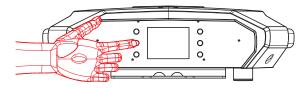

### Home Screen

The Maverick Force 2 Profile has a home screen that shows the current control protocols, personalities, starting addresses, IP addresses, and universes. To see the home screen, press **<MENU>** repeatedly until it shows on the display. From the home screen, touch any of the displayed control settings to immediately jump to that part of the menu, such as the personality, starting address, or universe, or press **<ENTER>** to reach the main menu.

## **Control Panel Lock**

The setting locks or unlocks the control panel.

- 1. Go to the Settings main level.
- 2. Select the Lock Screen option.
- 3. Select NO (control panel stays unlocked) or YES (locks control panel).




When the control panel lock is activated, the product will prompt for the passcode in order to access the menu. Enter the passcode as described below.

## Passcode

After being prompted to enter the passcode, press <UP>, <DOWN>, <UP>, <DOWN>, <ENTER>.

### **Technician Mode**

The technician mode disables the pan and tilt motors, allowing the output of the product to be aimed by hand. To enable the technician mode of the Maverick Force 2 Profile, hold **<UP>** and **<LEFT>** while the product is powering on. When the product is turned off and back on, the pan and tilt will return to normal function.

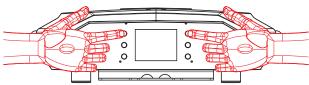



## Menu Map

Refer to the Maverick Force 2 Profile product page on <u>www.chauvetprofessional.com</u> for the latest menu map.

Main Level	Programm	Description	
Address	001	Sets the starting address	
		Manual	Manually set IP address
	IP Mode	DHCP	Network sets IP address
		Static	Product sets IP address
Network Setup	Universe	000–255 (Art-Net™) 001–256 (sACN)	Sets the universe
	lp		Sets the IP address in Manual mode
	SubMask		Sets the Subnet Mask in Manual mode
	Dmx Mode 33 CH	NO	Selects the 33-channel mod
Personality		YES	
	Dmx Mode 50 CH	NO	Selects the 50-channel mod
		YES	
		DMX	
	ControlMode	WDMX	Sets the control protocol
		ArtNet	
		SACN	
	Pan Reverse	NO	Normal pan
		YES	Reversed pan
	Tilt Reverse	NO	Normal tilt
		YES	Reversed tilt
		NO	Normal display
	Screen Reverse	YES	Inverted display
		AUTO	Automatic display orientation
		540	540° pan range
	Pan Angle	360	360° pan range
		180	180° pan range
•		270	270° tilt range
Settings	Tilt Angle	180	180° tilt range
		90	90° tilt range
	BL. O. P/T Move	NO	Do not black out while panning/tilting
		YES	Blackout while panning/tilting
	BL. O. Color Move	NO	Do not black out while color wheel moving
		YES	Blackout while color wheel moving
	BL. O. Gobo Move	NO	Do not black out while gobo wheels moving
		YES	Blackout while gobo wheels moving
	Calibration	NO	Cancel calibration
		YES	Calibrate touchscreen
	Touchscreen Lock	NO	Touch screen enabled
		YES	Touch screen disabled



Main Level	Programm	ing Levels	Description
	Lock Screen	NO YES	Lock the buttons and touch screen. Passcode: 0920
		NO	Do not swap pan and tilt
	Swap XY	YES	Pan controls tilt, tilt controls pan
		NO	Do not reset WDMX
	WDMX Reset	YES	Reset WDMX
		30S	Display turns off after 30 seconds
	Backlight Timer	1M	Display turns off after 1 minute
		5M	Display turns off after 5 minutes
		ON	Display stays on
	Loss of Data	Hold	Holds last signal received
	2000 01 2444	Close	Blacks out fixture
		Auto	Fan speed according to product temperature
		Full	Fan speed set on high
		ECO	Quiet mode
	Fans	TV25	Maintains LED output up to an ambient temperature of 77 °F (25 °C) ( <b>TV25</b> ) or 95 °F (35 °C) ( <b>TV35</b> ).
Settings (cont.)		TV35	When using these fan modes, please set the <b>PWM Options</b> to <b>6000Hz</b> or <b>15000Hz</b> to prevent any possible harmonization noise.
		Linear	
		Square	
	Dimmer Curve	l Squa	Set the dimmer curve
		SCurve	
		Linear2	
		600Hz	
		1200Hz	Sets the Pulse Width
	PWM Option	4000Hz	Modulation frequency
		6000Hz	
		15000Hz	
	LED POWER	064–255	Sets the maximum LED output
	Min Zoom Focus	NO	Enables/disables minimum
		YES	zoom focus
		PRESET A	Recorded preset menu
	Preset Select	PRESET B	Recorded preset menu     options
		PRESET C	
		NO	Allows recorded preset menu
	Preset Sync	YES	options to be transferred to other Maverick Force 2 Profile fixtures in the DMX daisy chain
	USB Update	NO	Enables/disables updating by
	OOD Opuale	YES	USB



## Operation

lain Level		Programming Levels		Description
		Pan/Tilt		
		Iris/Prism		
	Reset	Color/CMY/Blade NO/YES		Reset individual functions
Settings	Function	Gobo/Gobo Rotate	NOTES	all functions from start-up
(cont.)		Frost		
		All		
	Factory	Settings	NO	Reset to factory default
	i dotor y	-	YES	settings
		Auto Test		Auto test all functions
		Pan		
		Pan Fine		
		Tilt		
		Tilt Fine		
		P/T Speed		
		Dimmer		
		Dimmer Fine Shutter		
		Virtual Shaking		
		Cyan		
		Magenta Yellow		
		СТО	0	
		Color		
		Gobo Gobo Rotate		
		Gobo Index		
		Gobo2		
Test	Manual Test	Gobo2 Rotate		Manually control and test a
		Gobo2 Index	000–255	settings through the contro
		Blade1- 1		panel
		Blade1-1 Fine		
		Blade1-2		
		Blade1- 2 Fine		
		Blade2- 1		
		Blade2-1 Fine		
		Blade2- 2		
		Blade2- 2 Fine		
		Blade3- 1		
		Blade3-1 Fine		
		Blade3- 2		
		Blade3- 2 Fine		
		Blade4- 1		
		Blade4- 1 Fine		
		Blade4- 2		
		Blade4- 2 Fine		
		Blade Rotate		
		Blade. Rota Fine		



Main Level		Programming Levels		Description
		Focus		
	_	Focus Fine		
	_	Focus Auto		
	_	Zoom		
	_	Zoom Fine		
Test (sent)	Manual Test	Prism		Manually control and test all
Test (cont.)	cont.) (cont.)	Prism Rotate	000–255	settings through the control panel
	_	Iris		
	_	Frost		
	_	CMY Macro		
	_	CMY Macro Speed		
	_	Special Function		
		Ver	V_	Shows firmware version
		Running Mode		Shows current running mode
		DMX Address		Shows current starting address
	Fixture	Temperature		Shows current product temperature in °C
	Information	Fixture Hours		Shows number of hours product has been powered on
		lp		Shows current IP address
		SubMask		Shows current Subnet Mask
		MAC		Shows current MAC address
		head Fan1 Speed		
		head Fan2 Speed		
		head Fan3 Speed		
	Fan	head Fan4 Speed		Shows speed of head fans in
	Information	Base Fan1 Speed		rpm
		Base Fan2 Speed		
Information		Base Fan3 Speed		
		Base Fan4 Speed		
	Error Info			Shows any errors, or No Error!
		Frequency		
		Pan		
		Pan Fine		
		Tilt		
		Tilt Fine		
		P/T Speed		Shows all current values fror
	Channel	Dimmer		
	Information	Dimmer Fine		input signals, 000–255
		Shutter		
		Virtual Shaking		
	Суа	Cyan		
		Magenta		
		Yellow		
		СТО		

## Operation



Main Level		Programming Levels		Description
		Color		
		Gobo		
		Gobo Rotate		
		Gobo Index		
		Gobo2		
		Gobo2 Rotate		
		Gobo2 Index	-	
	-	Blade1- 1	-	
		Blade1- 1 Fine		
	-	Blade1- 2	-	
		Blade1- 2 Fine		
		Blade2- 1		
		Blade2- 1 Fine		
		Blade2- 2		
		Blade2- 2 Fine	_	
		Blade3-1	_	
		Blade3-1 Fine	Shows all current valu – – – input signals, 000–25	
Information	Channel	Blade3- 2		Shows all current values from
(cont.)		Blade3- 2 Fine		input signals, 000–255
		Blade4- 1		
	_	Blade4- 1 Fine	_	
		Blade4- 2	_	
		Blade4- 2 Fine	_	
	-	Blade Rotate	_	
		Blade. Rota Fine	_	
	-	Focus	-	
		Focus Fine	_	
		Focus Auto	-	
	-	Zoom	-	
	-	Zoom Fine	-	
		Prism		
		Prism Rotate	-	
	-	lris Front	-	
		Frost CMY Macro	4	
			-	
		CMY Macro Speed	4	
		Special Function		



## Configuration (DMX, Art-Net<sup>™</sup>, sACN)

Use control configurations to operate the product with a DMX, Art-Net<sup>™</sup>, or sACN controller.

#### **Control Mode**

The Maverick Force 2 Profile works with wired DMX, WDMX, Art-Net<sup>™</sup>, and sACN control signals. To select which protocol to use:

- 1. Go to the **Settings** main level.
- 2. Select the **ControlMode** option.
- 3. Select the desired protocol, from DMX, WDMX, ArtNet, or sACN.
  - See the <u>WDMX Reset</u> section for further setup of WDMX.
    - See the <u>Network Setup</u> section for further setup of ethernet protocols (Art-Net<sup>™</sup> or sACN).

#### **Control Personalities**

To set the control personality:

- 1. Go to the **Personality** main level.
- 2. Select the desired personality, from Dmx Mode 33 CH or Dmx Mode 50 CH.
  - See the <u>Starting Address</u> section for the highest starting address you can select for each personality.
  - Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

#### **Starting Address**

Each product will respond to a unique starting address from the controller. All products with the same starting address will respond in unison. To set the starting address:

- 1. Go to the Address main level.
- 2. Select the starting address (001–480).
  - The highest recommended starting address for Dmx Mode 33 CH is 480.
  - The highest recommended starting address for Dmx Mode 50 CH is 463.

#### **Network Setup**

The Network Setup settings control the IP address, subnet mask, and universe of the product. **IP Mode** 

To choose how the IP address is set:

- 1. Go to the **Network Setup** main level.
- 2. Select the **IP Mode** option.
- 3. Select the desired IP mode, from **Manual** (to set a custom IP address), **DHCP** (the IP address is assigned by the connected network), or **Static** (the product uses a default, preset IP address).

#### Universe

To assign an Art-Net<sup>™</sup> or sACN universe to the Maverick Force 2 Profile:

- 1. Go to the **Network Setup** main level.
- 2. Select the Universe option.
- 3. Set the universe, from 000–255 (for Art-Net<sup>™</sup>) or from 001–256 (for sACN).

#### **Manual IP Address**

To set the IP address when the IP Mode is set to Manual:

- 1. Go to the Network Setup main level.
- 2. Select the Ip option.
- 3. Set the 4 values of the IP address from **000–255**.

#### Subnet Mask

To set the subnet mask:

- 1. Go to the **Network Setup** main level.
- 2. Select the SubMask option.
- 3. Set the 4 values of the subnet mask from **000–255**.





## Control Channel Assignments and Values Dmx Mode 50 CH

e Pan e Tilt /Tilt Speed mer e Dimmer tter tter ual Strobe n jenta ow	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	Fine control (16-bit) 0–100% Fine control (16-bit) Fast to slow 0–100% Fine control (16-bit) Closed Open Strobe, slow to fast Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
e Tilt /Tilt Speed mer e Dimmer tter tter ual Strobe n jenta ow	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	0–100% Fine control (16-bit) Fast to slow 0–100% Fine control (16-bit) Closed Open Strobe, slow to fast Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
/Tilt Speed mer Dimmer Dimmer tter tter ual Strobe n jenta ow	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	Fine control (16-bit) Fast to slow 0–100% Fine control (16-bit) Closed Open Strobe, slow to fast Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
/Tilt Speed mer Dimmer Dimmer tter tter ual Strobe n jenta ow	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	Fast to slow 0–100% Fine control (16-bit) Closed Open Strobe, slow to fast Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
mer e Dimmer tter ual Strobe n jenta ow	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	0–100% Fine control (16-bit) Closed Open Strobe, slow to fast Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
e Dimmer tter ual Strobe n jenta ow	$\begin{array}{c c} 000 \Leftrightarrow 255 \\ 000 \Leftrightarrow 003 \\ 004 \Leftrightarrow 007 \\ 008 \Leftrightarrow 076 \\ 077 \Leftrightarrow 145 \\ 146 \Leftrightarrow 215 \\ 216 \Leftrightarrow 255 \\ 000 \Leftrightarrow 001 \\ 002 \Leftrightarrow 128 \\ 129 \Leftrightarrow 255 \\ 000 \Leftrightarrow 255 \\ 000 \Leftrightarrow 255 \\ 000 \Leftrightarrow 255 \end{array}$	Fine control (16-bit) Closed Open Strobe, slow to fast Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
tter ual Strobe n jenta ow	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	Closed Open Strobe, slow to fast Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
ual Strobe n jenta ow	$\begin{array}{c} 004 \Leftrightarrow 007 \\ 008 \Leftrightarrow 076 \\ 077 \Leftrightarrow 145 \\ 146 \Leftrightarrow 215 \\ 216 \Leftrightarrow 255 \\ 000 \Leftrightarrow 001 \\ 002 \Leftrightarrow 128 \\ 129 \Leftrightarrow 255 \\ 000 \Leftrightarrow 255 \\ 000 \Leftrightarrow 255 \end{array}$	Open Strobe, slow to fast Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
ual Strobe n jenta ow	$\begin{array}{c} 008 \Leftrightarrow 076 \\ 077 \Leftrightarrow 145 \\ 146 \Leftrightarrow 215 \\ 216 \Leftrightarrow 255 \\ 000 \Leftrightarrow 001 \\ 002 \Leftrightarrow 128 \\ 129 \Leftrightarrow 255 \\ 000 \Leftrightarrow 255 \\ 000 \Leftrightarrow 255 \end{array}$	Strobe, slow to fast Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
ual Strobe n jenta ow	$\begin{array}{c} 077 \Leftrightarrow 145 \\ 146 \Leftrightarrow 215 \\ 216 \Leftrightarrow 255 \\ 000 \Leftrightarrow 001 \\ 002 \Leftrightarrow 128 \\ 129 \Leftrightarrow 255 \\ 000 \Leftrightarrow 255 \\ 000 \Leftrightarrow 255 \end{array}$	Pulse strobe, slow to fast Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
ual Strobe n jenta ow	$ \begin{array}{c}     146 \Leftrightarrow 215 \\     216 \Leftrightarrow 255 \\     000 \Leftrightarrow 001 \\     002 \Leftrightarrow 128 \\     129 \Leftrightarrow 255 \\     000 \Leftrightarrow 255 \\     000 \Leftrightarrow 255 \\ \end{array} $	Random strobe, slow to fast Open No function Shaking strobe, slow to fast Fading shake, slow to fast
n jenta ow	216 ⇔ 255 000 ⇔ 001 002 ⇔ 128 129 ⇔ 255 000 ⇔ 255 000 ⇔ 255	Open No function Shaking strobe, slow to fast Fading shake, slow to fast
n jenta ow	000 ⇔ 001 002 ⇔ 128 129 ⇔ 255 000 ⇔ 255 000 ⇔ 255	No function Shaking strobe, slow to fast Fading shake, slow to fast
n jenta ow	000 ⇔ 001 002 ⇔ 128 129 ⇔ 255 000 ⇔ 255 000 ⇔ 255	No function Shaking strobe, slow to fast Fading shake, slow to fast
n jenta ow	129 ⇔ 255           000 ⇔ 255           000 ⇔ 255	Fading shake, slow to fast
jenta ow	129 ⇔ 255           000 ⇔ 255           000 ⇔ 255	Fading shake, slow to fast
jenta ow	000 ⇔ 255 000 ⇔ 255	•
jenta ow		0-100%
ow		0–100%
)	000 ⇔ 255	0–100%
	000 🗇 255	0–100%
	000 ⇔ 006	Open
	007 🗇 013	•
	014 ⇔ 020	Orange
	021 🗇 027	5
	028 ⇔ 034	Magenta
	035 ⇔ 041	
or Wheel	042 ⇔ 048	
	049 ⇔ 059	
		Color wheel indexing
		Color scroll, fast to slow
	220 ⇔ 223	
		Reverse color scroll, slow to fast
	000 ⇔ 007	
		Gobo 1 (Sail Boats)
		Gobo 2 (Radial Dot)
		Gobo 3 (Dots)
		Gobo 4 (Bolts)
		Gobo 5 (Shower Glass)
		Gobo 6 (Ballistic Clouds)
		Gobo 7 (Four Eyes)
		Gobo 7 shaking
o Wheel 1		Gobo 6 shaking
		Gobo 5 shaking
		Gobo 4 shaking
		Gobo 3 shaking
		Gobo 2 shaking
		Gobo 1 shaking
		•
		Gobo scroll, slow to fast
00	o Wheel 1	048 ⇔ 055         056 ⇔ 063         064 ⇔ 071         072 ⇔ 079         080 ⇔ 087         088 ⇔ 095         096 ⇔ 103         104 ⇔ 111         112 ⇔ 119         120 ⇔ 127



	I Function	Value	Percent/Setting
			Rotating gobo index
		064 🗇 145	Gobo rotation, fast to slow
16	Gobo 1 Rotate	146 🗇 149	
		150 🗇 231	Reverse gobo rotation, slow to fast
			Bounce effect, short to long
17	Gobo Wheel 1 Indexing	000 🗇 255	Fine control (16-bit)
		000 🗇 007	
			Gobo 1 (Spiral)
			Gobo 2 (Abstracts)
			Gobo 3 (Brick Wall)
			Gobo 4 (Chess)
			Gobo 5 (Granny Sue)
			Gobo 6 (Color Weave)
			Gobo 7 (Indigo Square Breakup)
18	Gobo Wheel 2		Gobo 7 shaking
10			Gobo 6 shaking
			Gobo 5 shaking
			Gobo 4 shaking
			Gobo 3 shaking
			Gobo 2 shaking
			Gobo 1 shaking
		120 🗇 127	
			Gobo scroll, slow to fast
			Reverse gobo scroll, slow to fast
			Rotating gobo index
			Gobo rotation, fast to slow
19	Gobo 2 Rotate	146 🗇 149	
			Reverse gobo rotation, slow to fast
			Bounce effect, short to long
20			
21	Blade 1-1	000 ⇔ 255	
22	Blade 1-1 Fine		Fine control (16-bit)
23	Blade 1-2	000 ⇔ 255	
24	Blade 1-2 Fine		Fine control (16-bit)
25 26	Blade 2-1 Blade 2-1 Fine	000 ⇔ 255	
20	Blade 2-1 Fille	000 ⇔ 255 000 ⇔ 255	Fine control (16-bit)
28	Blade 2-2 Fine		Fine control (16-bit)
20	Blade 3-1	000 ⇔ 255 000 ⇔ 255	
30	Blade 3-1 Fine		Fine control (16-bit)
31	Blade 3-2	000 ⇔ 255 000 ⇔ 255	
32	Blade 3-2 Fine		Fine control (16-bit)
33	Blade 4-1	000 ⇔ 255 000 ⇔ 255	
34	Blade 4-1 Fine		Fine control (16-bit)
35	Blade 4-2	000 ↔ 200 000 ⇔ 255	
36	Blade 4-2 Fine		Fine control (16-bit)
37	Frame Rotate	000 ↔ 200 000 ⇔ 255	
38	Frame Fine Rotate		Fine control (16-bit)
39	Focus	000 ⇔ 255	
40	Fine Focus		Fine control (16-bit)



Channel	Function	Value	Percent/Setting
		000 ⇔ 010	No function
		011 ⇔ 030	0–5 m
		031 ⇔ 050	6 m
		051 ⇔ 070	7 m
		071 ⇔ 090	8 m
41	Auto Focus	091 ⇔ 110	9 m
41	Autorocus	111 🗇 130	10 m
		131 🗇 150	12.5 m
		151 🗇 170	-
		171 🗇 190	17.5 m
		191 🗇 210	20–60 m
			Auto-detect distance
42	Zoom	000 ⇔ 255	
43	Fine Zoom000 ⇔ 255Fine control (16-bit)		
44	Prism		No function
			Prism effect
	Prism Rotate		Rotating prism index
45			Prism rotation, fast to slow
-10		190 ⇔ 193	
			Reverse prism rotation, slow to fast
			Big to small
46	Iris		Auto change, slow to fast
	1113		Slow open, fast close (slow to fast)
			Slow close, fast open (slow to fast)
47	Frost	000 ⇔ 255	
48	CMY Macro		No function
			CMY macro
49	CMY Macro Speed	000 ⇔ 255	CMY macro speed, fast to slow



Channel	Function		Percent/Setting
			No function
			XY blackout
		016 ⇔ 023	
		024 ⇔ 031	-
			XY/C blackout
			XY/G blackout
			XY/C/G blackout
			No function
		096 ⇔ 103	
		104 🗇 111	
		-	Color reset
			Gobo wheels and rotation reset
			High color temperature gobo on
			High color temperature gobo off
			Prism reset
50	Control	144 ↔ 151	Framing shutter reset
50	Control	152 ↔ 159	
			Frost reset
			Zoom reset
		170 ⇔ 183	
			Fan ECO mode
			Fan full speed
		208 \circ 215	•
		216 ⇔ 217	Fan TV25 mode
		-	Fan TV35 mode
			Iris fast mode
		226 ⇔ 230	Iris smooth mode
		231 ⇔ 235	XY swap on
			XY swap off
			Minimum zoom focus on
		246 ⇔ 250	Minimum zoom focus off
		251 ⇔ 255	No function
		1	1

#### Dmx Mode 33 CH

Channel Function		Value	Percent/Setting
1	Pan	000 🗇 255	0–100%
2	Fine Pan	000 🗇 255	Fine control (16-bit)
3	Tilt	000 🗇 255	0–100%
4	Fine Tilt	000 🗇 255	Fine control (16-bit)
5	Pan/Tilt Speed	000 ⇔ 255	Fast to slow
6	Dimmer	000 ⇔ 255	0–100%
	Shutter	000 🗇 003	
		004 🗇 007	
7		008 🗇 076	Strobe, slow to fast
'		077 🗇 145	Pulse strobe, slow to fast
		146 🗇 215	Random strobe, slow to fast
		216 🗇 255	Open
		000 🗇 001	No function
8	Virtual Strobe	002 🗇 128	Shaking strobe, slow to fast
		129 🗇 255	Fading shake, slow to fast
9	Cyan	000 🗇 255	0–100%
10	Magenta	000 ⇔ 255	0–100%

## Operation



Channel Function		Value	Percent/Setting	
11	Yellow	000 ⇔ 255	0–100%	
12	СТО	000 ⇔ 255	0–100%	
	Color Wheel	000 ⇔ 006		
		007 ⇔ 013		
		014 ⇔ 020	0	
		021 ⇔ 027		
		028 ⇔ 034		
13		035 ⇔ 041		
10		042 ⇔ 048		
		049 ⇔ 059		
			Color wheel indexing	
			Color scroll, fast to slow	
		220 ⇔ 223		
			Reverse color scroll, slow to fast	
		000 ⇔ 007		
			Gobo 1 (Sail Boats)	
			Gobo 2 (Radial Dot)	
			Gobo 3 (Dots)	
			Gobo 4 (Bolts)	
			Gobo 5 (Shower Glass)	
			Gobo 6 (Ballistic Clouds)	
			Gobo 7 (Four Eyes)	
14	Gobo Wheel 1		Gobo 7 shaking	
			Gobo 6 shaking	
			Gobo 5 shaking	
			Gobo 4 shaking	
			Gobo 3 shaking	
			Gobo 2 shaking Gobo 1 shaking	
		120 ⇔ 127	Gobo scroll, slow to fast	
			Reverse gobo scroll, slow to fast Rotating gobo index	
			Gobo rotation, fast to slow	
15	Gobo 1 Rotate	064 ⇔ 145 146 ⇔ 149		
19	Gobo 1 Rotate		Reverse gobo rotation, slow to fast	
			Bounce effect, short to long	
		202 - 200	Bounce eneor, short to long	



Channe	Function	Value	Percent/Setting	
		000 🗇 007		
			Gobo 1 (Spiral)	
		016 ⇔ 023	Gobo 2 (Abstracts)	
			Gobo 3 (Brick Wall)	
		032 ⇔ 039	Gobo 4 (Chess)	
			Gobo 5 (Granny Sue)	
			Gobo 6 (Color Weave)	
			Gobo 7 (Indigo Square Breakup)	
			Gobo 7 shaking	
16	Gobo Wheel 2		Gobo 6 shaking	
			Gobo 5 shaking	
			Gobo 4 shaking	
			Gobo 3 shaking	
			Gobo 2 shaking	
			Gobo 1 shaking	
		120 🗇 127		
			Gobo scroll, slow to fast	
			Reverse gobo scroll, slow to fast	
		000 🗇 063	Rotating gobo index	
		064 ⇔ 145	Gobo rotation, fast to slow	
17	Gobo 2 Rotate	146 🗇 149	Stop	
			Reverse gobo rotation, slow to fast	
			Bounce effect, short to long	
18	Blade 1-1	000 ⇔ 255		
19	Blade 1-2	000 ⇔ 255	0–100%	
20	Blade 2-1	000 ⇔ 255	0–100%	
21	Blade 2-2	000 🗇 255		
22	Blade 3-1	000 ⇔ 255		
23	Blade 3-2	000 ⇔ 255		
24	Blade 4-1	000 ⇔ 255		
25	Blade 4-2	000 \cong 255		
26	Frame Rotate	000 \ 255		
27	Focus	000 \le 255		
28	Zoom	000 \cong 255		
			No function	
29	Prism		Prism effect	
			Rotating prism index	
			Prism rotation, fast to slow	
30	Prism Rotate			
	-	190 ⇔ 193		
			Reverse prism rotation, slow to fast	
			Big to small	
31	Iris		Auto change, slow to fast	
<b>v</b> i			Slow open, fast close (slow to fast)	
			Slow close, fast open (slow to fast)	
32	Frost	000 ⇔ 255	0–100%	



Channel	Function		Percent/Setting
		000 ⇔ 007	No function
			XY blackout
		016 ⇔ 023	
		024 ⇔ 031	G blackout
		032 ⇔ 039	XY/C blackout
			XY/G blackout
			XY/C/G blackout
			No function
		096 ⇔ 103	
		104 🗇 111	
			Color reset
			Gobo wheels and rotation reset
			High color temperature gobo on
			High color temperature gobo off
			Prism reset
			Framing shutter reset
33	Control	152 ⇔ 159	
		160 ⇔ 167	
			Frost reset
			Zoom reset
			CMY reset
			Fan ECO mode
			Fan full speed
		208 ⇔ 215	
		-	Fan TV25 mode
			Fan TV35 mode
			Iris fast mode
			Iris smooth mode
			XY swap on
			XY swap off
		-	Minimum zoom focus on
			Minimum zoom focus off
		201 🖓 255	No function



## **Configuration (Settings)**

#### **Pan Reverse**

To set the orientation of the pan:

- 1. Go to the **Settings** main level.
- 2. Select the **Pan Reverse** option.
- 3. Select from NO (normal pan motion), or YES (reversed pan motion).

#### Tilt Reverse

To set the orientation of the tilt:

- 1. Go to the **Settings** main level.
- 2. Select the **Tilt Reverse** option.
- 3. Select from NO (normal tilt motion), or YES (reversed tilt motion).

#### Screen Reverse

To set the orientation of the display:

- 1. Go to the **Settings** main level.
- 2. Select the Screen Reverse option.
- 3. Select from **NO** (right-side up), **YES** (upside-down), or **AUTO** (changes depending on the orientation of the product).

#### Pan Angle

To set the maximum angle of the pan:

- 1. Go to the Settings main level.
- 2. Select the **Pan Angle** option.
- 3. Select from **540** (540°), **360** (360°), or **180** (180°).

#### Tilt Angle

To set the maximum angle of the tilt:

- 1. Go to the **Settings** main level.
- 2. Select the **Tilt Angle** option.
- 3. Select from **270** (270°), **180** (180°), or **90** (90°).

#### **Blackout on Movement**

To set the Maverick Force 2 Profile to black out on pan or tilt movement, color wheel movement, or gobo wheel movement:

- 1. Go to the **Settings** main level.
- 2. Select the **BL. O. P/T Move** (blackout on pan or tilt movement), **BL. O. Color Move** (blackout on color wheel movement), or **BL. O. Gobo Move** (blackout on gobo wheel movement) option.
- 3. Select from **NO** (no blackout on selected movement), or **YES** (blackout during the selected movement).

#### Touchscreen Calibration

To calibrate the touchscreen:

- 1. Go to the **Settings** main level.
- 2. Select the Calibration option.
- 3. Select from NO (cancel), or YES (calibrate).
- 4. Follow the instructions on the display.

#### Touchscreen Lock

To lock the touchscreen and limit the display to operation by the menu buttons:

- 1. Go to the **Settings** main level.
- 2. Select the **Touchscreen Lock** option.
- 3. Select from NO (do not lock the touchscreen), or YES (lock the touchscreen).

#### Swap Pan and Tilt

To swap the pan and tilt controls for each other:

- 1. Go to the Settings main level.
- 2. Select the Swap XY option.

3. Select from **NO** (do not swap), or **YES** (swap so pan controls tilt and tilt controls pan).

#### WDMX Reset

To reset the WDMX connection and allow the Maverick Force 2 Profile to connect to a WDMX transmitter:

- 1. Go to the **Settings** main level.
- 2. Select the **WDMX** Reset option.
- 3. Select from NO (do not reset), or YES (reset the WDMX connection).



Follow instructions in the manual or guide for the WDMX controller being used to connect it to the receiver in the Maverick Force 2 Profile.



#### Display Backlight Timer

To set the length of time before an inactive display will turn off:

- 1. Go to the Settings main level.
- 2. Select the Backlight Timer option.
- 3. Select the length of the backlight timer, from **30S** (30 seconds), **1M** (1 minute), **5M** (5 minutes), or **ON** (always on).

#### Loss of Data

To set how the product reacts to a loss in control signal data:

- 1. Go to the Settings main level.
- 2. Select the Los of Data option.
- 3. Select from Hold (holds the last values received before signal loss), or Close (blacks out the product).

#### Fan Mode

To set the fan speed mode:

- 1. Go to the Settings main level.
- 2. Select the Fans option.
- 3. Select the fan mode, from Auto (fan speed adjusts to product temperature), Full (fan speed at maximum), **ECO** (quiet mode), **TV25** (maintains a consistent LED output up to an ambient temperature of 77 °F [25 °C]), or **TV35** (maintains a consistent LED output up to an ambient temperature of 95 °F [35 °C]).



When using the fan modes TV25 or TV35, please set the PWM Options to 6000Hz or 15000Hz to prevent any possible harmonization noise.

#### Dimmer Curve

To set the dimmer curve:

- 1. Go to the Settings main level.
- 2. Select the Dimmer Curve option.
- Select the dimmer curve, from Linear, Square, I Squa, SCurve or Linear2.

#### Pulse Width Modulation

To adjust the frequency of the pulse width modulation:

- 1. Go to the Settings main level.
- Select the PWM Option option.
   Select the frequency, from 600Hz, 1200Hz, 2000Hz, 4000Hz, 6000Hz, or 15000Hz.

#### LED Power

To set the maximum power of the LED output:

- 1. Go to the **Settings** main level.
- 2. Select the LED POWER option.
- 3. Set the power from 064-255.

#### Minimum Zoom Focus

To enable or disable the minimum zoom focus function:

- 1. Go to the Settings main level.
- 2. Select the Min Zoom Focus option.
- 3. Select from NO (disable), or YES (enable).

#### Preset Selection

To select a preset configuration of menu options:

- 1. Go to the Settings main level.
- 2. Select the Preset Select option.
- 3. Select from PRESET A (default), PRESET B, or PRESET C.
  - Changes to settings automatically save to the currently selected Preset.
  - If no Preset has been selected, changes to settings save to PRESET A.
  - After selecting a Preset, the product will restart.



#### **Preset Synchronization**

To transfer saved Presets from one Maverick Force 2 Profile to another:

- 1. Connect the Maverick Force 2 Profile products to receive the Presets by a DMX daisy chain.
- 2. Make the Maverick Force 2 Profile with the Presets to transfer the first in the DMX daisy chain.
- 3. Power on all of the products.
- 4. Set all of the products to a <u>Control Mode</u> other than WDMX. (DMX, ArtNet, or sACN)
- 5. On the Maverick Force 2 Profile with the Presets, go to the **Settings** main level.
- 6. Select the Preset Sync option.
- 7. Select NO (to cancel) or YES (to transfer the Presets to the connected products).
  - All menu configurations are transferred except for the IP address.
  - ONLY connect Maverick Force 2 Profile products for this function!

#### **USB** Update

To enable or disable updating the firmware via the USB C port:

- 1. Go to the **Settings** main level.
- 2. Select the USB Update option.
- 3. Select from NO (disable), or YES (enable).



See the <u>USB Software Update</u> section for the detailed instructions on how to update the Maverick Force 2 Profile software using the USB flash drive.

#### **Reset Function**

To reset specific functions or the entire product:

- 1. Go to the **Settings** main level.
- 2. Select the **Reset Function** option.
- 3. Select the functions to reset, from:
  - Pan/Tilt
  - Iris/Prism
  - Color/CMY/Blade
  - Gobo/Gobo Rotate
  - Frost
  - or All
- 4. Select NO (to cancel) or YES (to reset the selected functions).

#### **Factory Reset**

To reset the product to factory settings:

- 1. Go to the **Settings** main level.
- 2. Select the Factory Reset option.
- 3. Select NO (to cancel) or YES (to reset the product configuration).

#### **Test Mode**

#### Auto Test

To have the Maverick Force 2 Profile automatically test all functions one after the other:

- 1. Go to the **Test** main level.
- 2. Select the Auto Test option.

#### **Manual Test**

To manually test an individual function of the Maverick Force 2 Profile:

- 1. Go to the **Test** main level.
- 2. Select the Manual Test option.
- Select a function to test, from Pan, Pan Fine, Tilt, Tilt Fine, P/T Speed, Dimmer, Dimmer Fine, Shutter, Virtual Shaking, Cyan, Magenta, Yellow, CTO, Color, Gobo, Gobo Rotate, Gobo Index, Gobo2, Gobo2 Rotate, Gobo2 Index, Blade1- 1, Blade1- 1 Fine, Blade1- 2, Blade1- 2 Fine, Blade2- 1, Blade2- 1 Fine, Blade2- 2, Blade2- 2 Fine, Blade3- 1, Blade3- 1 Fine, Blade3-2, Blade3- 2 Fine, Blade4- 1, Blade4- 1 Fine, Blade4- 2, Blade4- 2 Fine, Blade Rotate, Blade. Rota Fine, Focus, Focus Fine, Focus Auto, Zoom, Zoom Fine, Prism, Prism Rotate, Iris, Frost, CMY Macro, CMY Macro Speed, or Special Function.
- 4. Increase or decrease the value of the selected function from 000-255 to test it.



## System Information

The information section of the menu displays statistics and the current status of the product's various functions. To view these information sections:

- 1. Go to the Information main level.
- Select which information to view, from Fixture Information (shows the firmware version, running mode, addresses, temperature, and running time), Fan Information (shows the speed of the fans in rotations per minute (rpm)), Error Information (shows any error or No Error!), or Channel Information (shows the current values of all signal input channels).
- 3. If necessary, scroll up and down to view all information available in the selected option.

## Offset Mode (Zero Adjust)

The Offset mode provides fine adjustments for the home position of every moving part in the optical path as well as the pan and tilt movements. To adjust these options and prevent borders showing or reduction of the light output:

- 1. From the main level screen, press and hold <MENU> until the passcode screen appears.
- 2. Enter the passcode: 2323 and press <ENTER>.
- Select the "zero" position to adjust, from PAN, TILT, COLOR, GOBO, GOBO ROTATE, GOBO2, GOBO2 ROTATE, FOCUS-GOBO, FOCUS-GOBO2, ZOOM, PRISM, PRISM ROT, IRIS, FROST, CYAN, MAGENTA, YELLOW, CTO, BLADE1-1, BLADE1-2, BLADE2-1, BLADE2-2, BLADE3-1, BLADE3-2, BLADE4-1, BLADE4-2, BLADE ROTATE, DIMMER1, DIMMER2, DIMMER3, MAC4, MAC5, or MAC6.
- 4. Adjust the "zero" position for the selected function from 000-255.

#### Web Server

The Maverick Force 2 Profile Web Server can be accessed by any computer on the same network as the product. It allows network access to system information, settings such as control setup, manual testing of all functions, firmware updates, and the ability to change the Web Server password.

- 1. Connect the product to power, and set the <u>Control Mode</u> to **ArtNet** and the <u>IP Mode</u> to **Static**.
- 2. Connect the product to a Windows computer with a network cable.
- 3. On the computer, set the first value of the IP address of the new network to match the first value of the IP address of the product. The IP address of the product is displayed on the <u>Home Screen</u>.
- 4. Enter the IP address of the product into the URL bar of a web browser on the computer.
- 5. Enter both the User Name and Password as **admin** to log in.

#### Information

The Information page on the Web Server displays the current settings and the system information of the Maverick Force 2 Profile.

#### Setup

The Setup page on the Web Server provides options for control, similar to the **Setup** menu on the product. Click **Save Settings** to send the new configuration to the product.

#### Manual Test

The Manual Test page on the Web Server allows all output functions of the product to be controlled through the browser. To set all functions back to default, click **Reset**.

#### **Firmware Update**


The Upgrade page on the Web Server allows the product to be updated with the latest firmware. Go to <u>https://www.chauvetprofessional.com</u> to download firmware updates.

#### Security


The Security page on the Web Server gives the option to change the password to the connected product's web server. Enter the old password (**admin**, by default) and the new password twice, then click **Save Settings** to change the password.



## **Gobo Wheels**

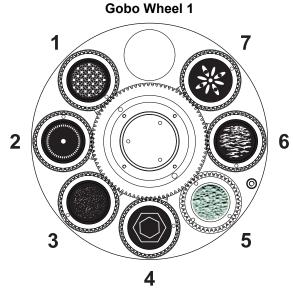


Gobo Wheel 2

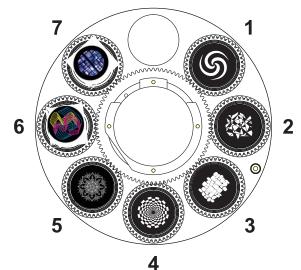

Gobo Wheel Gobo		Description
	1	Sail Boats
	2	Radial Dot
	3	Dots
1	4	Bolts
	5	Shower Glass
	6	Ballistic Glass
	7	Four Eyes


Gobo Wheel Gobo # Description 1 Spiral Abstracts 2 Brick Wall 3 2 4 Chess Granny Sue 5 6 Color Weave Indigo Square Breakup 7

#### **Gobo Dimensions**

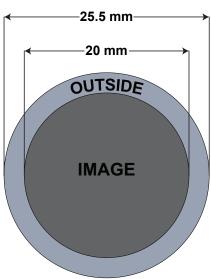

Gobo Wheel 1



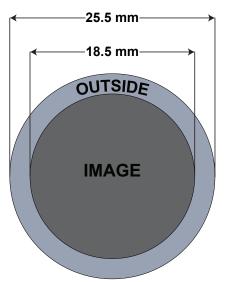



### **Gobo Replacement**


The gobos in gobo wheel 1 are removable from their gobo holders. This operation is quite simple, although it requires the technician to carefully follow the recommended procedure.

- Make sure to disconnect the product's power cord before replacing a gobo.
- Always replace a gobo with a gobo of the same dimensions.
- When inserting a glass gobo, always make sure that the shiny side of the gobo (glass base) faces the lamp. This provides a layer of protection against the high temperature from the lamp.

#### Procedure

- 1. Turn the product off and disconnect it from the power outlet.
- 2. Open the head cover by loosening the screws on the top cover.
- 3. Separate the gobo holder away from the gobo wheel by pushing it toward the front of the moving head (direction 1 in the diagram). Be careful not to push the gobo out of the gobo holder.
- 4. Extract the gobo holder by pulling it outward (direction 2 in the diagram).
- 5. On a flat surface, remove the expansion ring that holds the gobo in place and remove the gobo from the gobo holder.
- 6. Insert a new gobo and hold it in place with the expansion ring.
- 7. Slide the tip of the gobo holder under the pressure plate near the center of the gobo wheel.
- 8. Push the gobo holder inwards. DO NOT force the gobo holder into the gobo wheel slot. If correctly installed, the gobo holder should easily slide into the gobo wheel slot.


Diagram

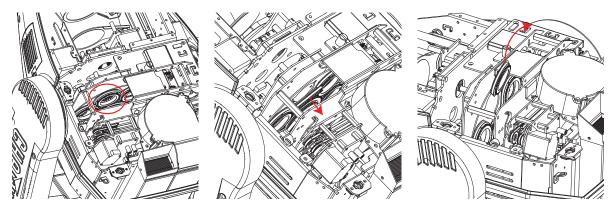

Locate

**Pull Back** 

Remove

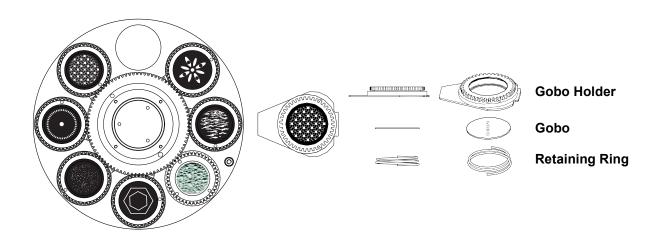





# 5. Maintenance

## **Product Maintenance**

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean your lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
- 4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.

Do not spin the cooling fans with compressed air. Damage may result.



# 6. Technical Specifications

Dimensions and	Weight					
Length		Width	Heigh		Weight	
15.51 in (394 mm) 10.71 i		in (272 mm) 26.38 in (670		0 mm) 5	mm) 57.3 lb (26 kg)	
Note: Dimensions in inches are rounded. Power						
Power Su	оріу Туре	Rai	nge	Voltage	Selection	
Switching	(internal)	100 to 240 V	AC, 50/60 Hz	Auto	-ranging	
Parameter	100 V, 60 Hz	120 V, 60 Hz	208 V, 60 Hz	230 V, 50 Hz	240 V, 50 Hz	
Consumption	800 W	780 W	764 W	754 W	762 W	
Operating Current	8.01 A	6.41 A	3.68 A	3.31 A	3.19 A	
Fuse/Breaker	F 13 A, 250 V	F 13 A, 250 V	F 13 A, 250 V	F 13 A, 250 V	F 13 A, 250 V	
Powe		U.S./Wo	orldwide		Europe	
Power Input			Powerkon A		Powerkon A	
Power C	ord plug	Edison	(U.S.)	Loc	al Plug	
Light Source						
Туре	Color	Quantity	Power	Current	Lifespan	
LED	Cool white (7500K)	1	580 W	4.2 A	50,000 hours	
Photometrics						
Front Lens Diame			-	utoff Angle	Zoom Range	
127 mm	6.8° to 48.	1° 7.6° to	54.9° 8	.4° to 55.9°	6.8 to 55.9°	
Color Temperatu (at Full)	(without CRI	Filter) (with CF	RI Filter)	(7°)	luminance @ 5 m (55°)	
7570K	70.8	89	.3	51,865 lux	1,648 lux	
Thermal						
Startup Tempe	-		perature Range		ig System	
Startup Tempe -4 °F–113 °F (-	-		perature Range (-30 °C–45 °C)		<b>g System</b> ed Convection	
	-				• •	
-4 °F–113 °F (- DMX	20 °C–45 °C) I/O Connector				ed Convection	
-4 °F–113 °F (- DMX	20 °C–45 °C)			Fan-assist	ed Convection	
-4 °F–113 °F (- DMX	20 °C–45 °C) I/O Connector			Fan-assist	ed Convection	
-4 °F–113 °F (- DMX Art-Net™/sACN	20 °C–45 °C) I/O Connector 3 and 5-pin XLR I/O Connector	-22 °F–113 °F		Fan-assist Channel Rang 33 or 50 Channel Rang	ed Convection	
-4 °F–113 °F (- DMX Art-Net™/sACN	20 °C–45 °C) I/O Connector 3 and 5-pin XLR	-22 °F–113 °F		Fan-assist <b>Channel Rang</b> 33 or 50	ed Convection e	
-4 °F–113 °F (- DMX Art-Net™/sACN	20 °C–45 °C) I/O Connector 3 and 5-pin XLR I/O Connector	-22 °F–113 °F		Fan-assist Channel Rang 33 or 50 Channel Rang	ed Convection e	
-4 °F–113 °F (- DMX Art-Net™/sACN Amphe	20 °C–45 °C) I/O Connector 3 and 5-pin XLR I/O Connector nol XLR Net RJ45	-22 °F–113 °F		Fan-assist Channel Rang 33 or 50 Channel Rang	ed Convection	





## Returns

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

To submit a service request online, go to <u>www.chauvetprofessional.com/service-request</u>.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



# Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Before sending the product, clearly write the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



# **Contact Us**

General Information	Technical Support
Chauvet World Headquarters	
Address: 5200 NW 108th Ave.	Voice: (844) 393-7575
Sunrise, FL 33351	Fax: (954) 756-8015
Voice: (954) 577-4455	Email: <u>chauvetcs@chauvetlighting.com</u>
Fax: (954) 929-5560	
Toll Free: (800) 762-1084	Website: www.chauvetprofessional.com
Chauvet Europe Ltd	
Address: Unit 1C	Email: UKtech@chauvetlighting.eu
Brookhill Road Industrial Estate	
Pinxton, Nottingham, UK	Website: www.chauvetprofessional.eu
NG16 6NT	
Voice: +44 (0) 1773 511115	
Fax: +44 (0) 1773 511110	
Chauvet Europe BVBA	
Address: Stokstraat 18	Email: BNLtech@chauvetlighting.eu
9770 Kruishoutem	
Belgium	Website: www.chauvetprofessional.eu
Voice: +32 9 388 93 97	
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin	Email: FRtech@chauvetlighting.fr
France	Website: www.chauvetprofessional.eu
Voice: +33 1 78 85 33 59	
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen	Email: <u>DEtech@chauvetlighting.de</u>
Germany	Website: www.chauvetprofessional.eu
Voice: +49 421 62 60 20	
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2)	Email: <u>servicio@chauvet.com.mx</u>
Zona Industrial Lerma	Website: www.chauvetprofessional.mx
Lerma, Edo. de México, CP 52000	
Voice: +52 (728) 690-2010	

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., U.K., Ireland, Benelux, France, Germany, or Mexico, contact the dealer of record.